


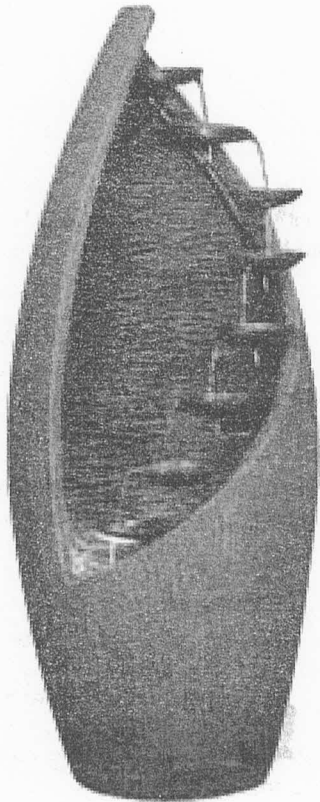

GIL122
Eight Dish Fountain with
Light




Assembling & Using Your Product

Unpack all components carefully. Please check to ensure all parts have been removed from the packaging. Decide on a suitable location, bearing in mind there may be some splashing when the product is in use.

Components:

- One (1) – Fountain
- One (1) – Submersible Fountain Pump
- One (1) – Transformer
- One (1) – 1 Halogen Light

Assembling:

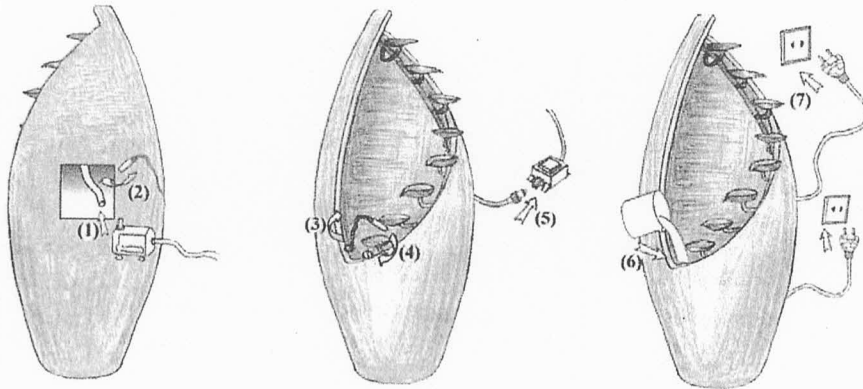

1-3

2-3

3-3

- Connect the flexible vinyl tubing to the pump fitting and set into the bottom of the fountain through the back opening shown (Diagram 1-3)
- Connect the Halogen Light and insert the light into the designated space provided. Make certain to remove the plastic black cover from the clear glass lens. Replace the back cover of the fountain, making sure the notched edge is located on the bottom right hand corner of fountain (Diagram 1-3)
- Connect the light string into the transformer. Connect all the electrical cords into your power source and/or electrical outlet, making certain no water comes in contact with the plug. Always make sure it's in a clear dry area. (Diagram 2-3)
- Gently pour water into the fountain, being careful not to overflow and cause splashing. Make sure the water completely submerges the pump and the water runs clear. Plug the transformer cord into your local power supply & make sure that there is no water around the plug & always keep the power source in a dry place. (Diagram 3-3)
 - NOTE: We recommend that you use distilled water to prevent scale build-up. The first time you operate the pump it can take up to 5 minutes for the air to be completely expelled and water begins to flow properly

Trouble Shooting & Caution

If you have any questions and/or problems, please contact the retail store you purchased this fountain.

- **If your pump fails to run**

- Check the circuit breaker or try a different outlet to make sure the pump is receiving electrical power.
- Check the pump discharge and tubing for any kinks and/or obstructions
- Any buildup obstructing the water flow can be flushed with a garden hose
- Check the rotor by removing the front cover & plate to access the impellor area. Turn the rotor and make sure that the rotor is not jammed or broken

- **If your pump “spews”**

- Check the water level to make sure the pump is completely submerged and there is enough water in the basin to operate your fountain. Not having enough water will cause your pump to spew

- **If your pump is making abnormal loud noises**

- Disconnect the pump from the electrical power supply and remove the front cover & plate
- Carefully grip the impellor and gently pull the impellor/rotor assembly out of the pump housing
- Rinse the impellor/rotor assembly and clean the cavity with clean water. If breakage or damage is found, contact your local retailer for parts



- **Caution**

- Always unplug the pump from the electrical outlet before cleaning & handling
- Uses with clean water only, do not place the fountain and/or parts in any other liquid.
- Periodically change water & clean the pump to keep free from micro-organisms
- Disconnect and store the unit in a dry place if not in use for an extended period of time
- Do not operate with water above 90°F or 30°C
- Do not lift, carry or pull the pump by the power cord
- Do not exceed the maximum voltage & wattage on transformer or pump
- NEVER LET THE PUMP RUN DRY

