




Package Contents

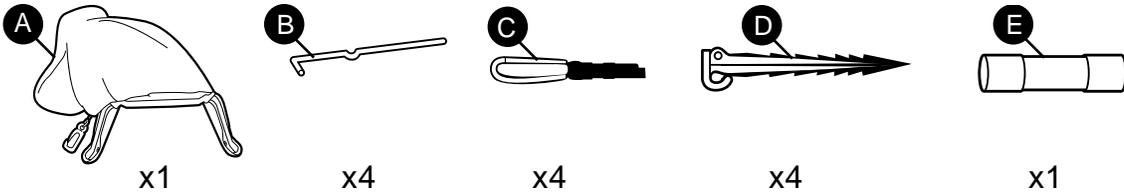


Assembly Instructions

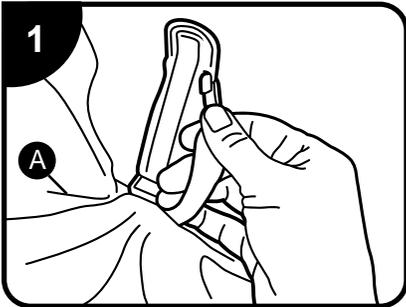


Ensure the four clips on the bottom of the fabric of the inflatable (A) are attached to the plastic legs on the base of the inflatable

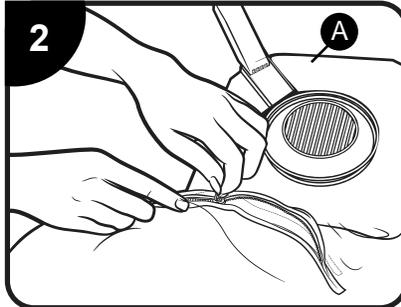


Ensure that the air intake on the inflatable (A) unit is clear of fabric and other obstructions and that the zipper is fully closed. Some inflatables have more than one zipper.

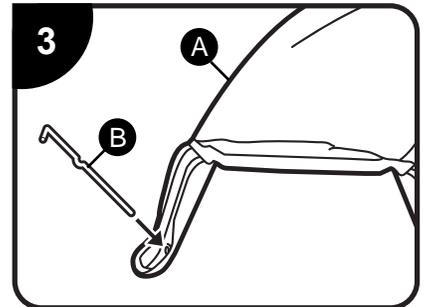


Turn the inflatable (A) upright and insert four base stakes (B) through the holes of the plastic legs into the ground.

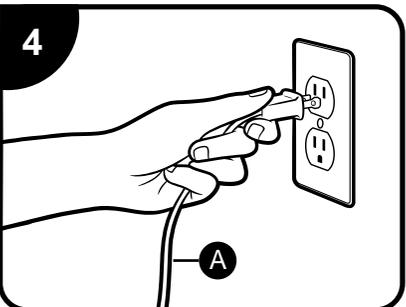


Plug in the inflatable (A) into an outlet or other power source to inflate

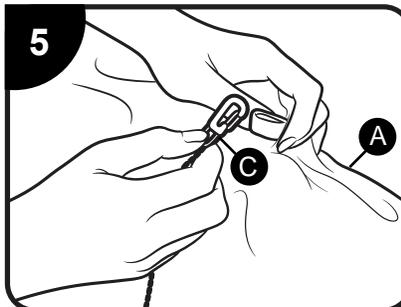


Once fully inflated, clip the nylon tethers (C) to each of the attached nylon loops on the side of the inflatable (A).

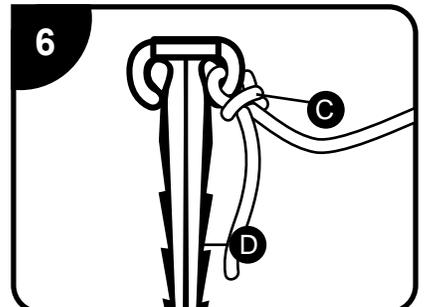


Using the loop at the end of the tether (C), fasten the tethers to the tether stakes (D).

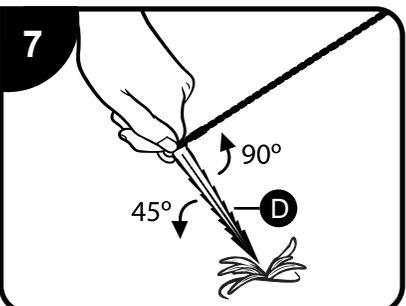

Drive the stakes (D) into ground at a 45-degree angle.

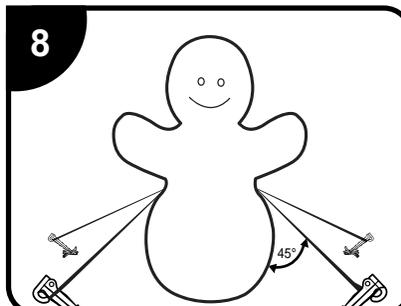

For maximum stability bring tether down to a 45-degree angle from the inflatable as shown in the illustration. In order to achieve this you may need to wrap the excess tether around the top of the stake.

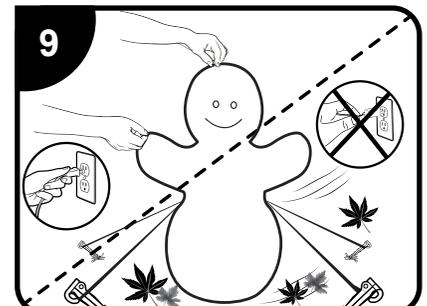

Do's and Don'ts

1. Do check your inflatable daily and adjust to stand up straight.
2. Do not attempt to operate your inflatable in unusually strong winds. (see caution)
3. Do not unplug by pulling on cord.
For faster deflation, unzip zipper after unplugging plug.

Visit WWW.GEMMY.COM for more information.

©2021 GEMMY INDUSTRIES CORP.

117 WRANGLER DRIVE, SUITE 100

COPPELL, TX 75019 U.S.A.

1 (800) 274-6717

MADE IN CHINA / PRINTED IN CHINA