

INSTRUCTIONS

⚠ WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

⚠ WARNING: ELECTRIC PRODUCT. Keep away from children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. To avoid the risk of electrical shock, always make sure the item is unplugged from the electrical outlet before assembling, disassembling, or relocating.

IMPORTANT SAFETY INSTRUCTIONS WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
5. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
6. Do not perform any maintenance or troubleshooting while the power is on.
7. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
8. Do not use this product for other than its intended purpose.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
11. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
12. Do not place the product against carpeting, furniture, or any other fabric when in use.
13. Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

Congratulations! You're the proud owner of your very own LightGlo™ Sign from Gemmy! Below, we hope you'll find the answers to many questions, and how to get maximum enjoyment from it for years to come!
Please read over the directions carefully before installing and operating this item. Some assembly is required.

CONTENTS

| | | | | | |
|----------------|---------|---------|---------|--------|----------|
| LightGlo™ Sign | 1 piece | Adaptor | 1 piece | Stakes | 2 pieces |
|----------------|---------|---------|---------|--------|----------|

ASSEMBLY INSTRUCTIONS

1. Carefully remove product from package. 2. Plug cord from sign into wall outlet. 3. Insert the stakes into the ground and secure to the bottom of the item.

CAUTION

To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal. b) Do not mount or support strings in a manner that can cut or damage wire insulation. c) Do not deliberately reposition either lampholder contact.

STORAGE

Do not discard the box, it can be used to store the product. Store in a cool, dry location.

TROUBLESHOOTING CHECKLIST

If the item is not operating, the problem may be: 1. The power source is disabled or the cord is unplugged.

NOTE: ONCE THE ITEM IS UNPLUGGED, THE PRODUCT WILL CEASE OPERATION.

FREQUENTLY ASKED QUESTIONS (FAQs)

1. Can I leave it running overnight?

We recommend that you turn off while unattended. Extended use beyond 8 hours will not damage this item.

2. How much electricity does it use?

Please refer to the tag attached to the adaptor.

3. What is the best way to store it?

Store dry in a bag, box or other storage container and keep in a cool, dry location.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the distance between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

THESE INSTRUCTIONS ARE FOR ITEM NUMBER

14332 73514



Visit WWW.GEMMY.COM for more information.
©2021 GEMMY INDUSTRIES CORP.
117 WRANGLER DRIVE, SUITE 100
COPPELL, TX 75019 U.S.A.
1(877)250-9032
MADE IN CHINA / PRINTED IN CHINA