

# DSC Porch Swing Assembly Instructions



Thank you for purchasing our porch swing. Please be aware that this product **requires assembly** and it is important to complete all the following steps in the assembly process. **Failure to follow these instructions could result in injury and must be completed prior to sitting in the swing.** Please make sure that all parts and hardware are available prior to assembly. Inspect all parts for any damage that may have occurred during shipment. In the case of damaged or missing parts, contact Dixie Seating, using the information below. Individual parts will be sent to you as replacements. We would recommend that you familiarize yourself with these instructions prior to assembly. Use hardware and fasteners provided. Failure to use proper tools may damage swing. **The manufacturer will not be liable for any damage or injury that results from improper assembly.** If you have any questions regarding the assembly of this swing, feel free to contact us using any of the methods listed below:

EMAIL: [info@dixieseating.com](mailto:info@dixieseating.com)

Via the website: [www.dixieseating.com](http://www.dixieseating.com)

Phone: (704) 585-2992

Fax: (704) 585-2923

# Swing Assembly Instructions

Swing Seat (A)




Front of Seat

Back of Seat

Swing Back (B)



Swing Arms (C)

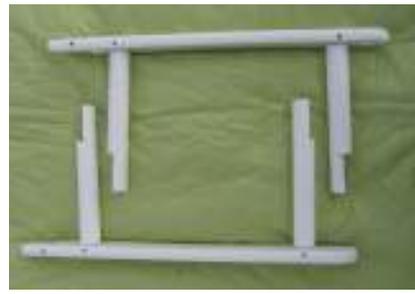

Arm Bolts (E)

- Parts Included:

  - 1 Swing Seat (A)
  - 1 Swing Back (B)
  - 2 Swing Arms (C)
  - 4 Eye Bolts and Nuts (D)
  - 2 Arm Bolts (E)
  - 2 Screws (F)
  - 1 Chain Assembly (G)

Tools Required For Assembly  
(not included)

  - Phillips Head Screwdriver
  - 9/16 Crescent Wrench
  - 1/4 Allen Wrench

Eye Bolts and Nuts (D)



Chain Assembly (G)



Screws (F)


If any piece of the porch swing doesn't fit well, use sand paper to lightly sand until desired fit is achieved.

## Step 1

Lay swing on the shipping box during assembly to protect it from scratching. Attach swing arm posts (C) to swing seat (A) using eye bolts and nuts (D). Place eyebolt through hole in swing seat (A) and swing arm post (C). Hand tighten nuts only (D). Complete this for both left and right sides.




NOTE: Be sure the screws on the arm face the inside of the swing.

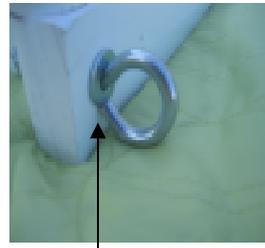

NOTE: Opening of eye bolt should be facing down.

## Step 2

Attach swing back (B) to swing arms (C) using arm bolts (E) (Hand tighten only.) Complete this for both sides.

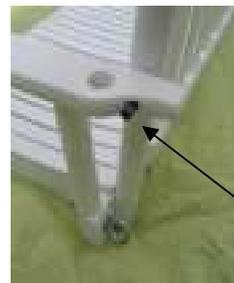

Arm Bolts (E)

## Step 3

Attach swing back (B) to swing seat (A) using back screws (F). Complete this for both sides.



## Step 4

Run swing chain (G) through the holes in the swing arm (C) and connect to the eye bolt (D) below. Complete this on all four corners of the swing. Using the appropriate tools, go back and securely tighten all arm bolts and eye bolts from previous steps.



Your swing is now ready to hang on the hooks provided. Be sure to place hooks in material capable of holding the load you will be placing on the swing. You will then be ready to use your swing for many years to come.

**◆ This swing has a weight limit of 350 lbs.**

- ◆ Look over the swing at least once a season to make sure all hardware is tight and chain is secure; check the wood for splits or damage. Reseal, paint, or stain as needed.
- ◆ Don't leave children unattended in a swing or let them stand up on the swing. A porch swing is designed for gentle swinging motions.
- ◆ Don't hang or support swings from brick or masonry. If you are not sure if a beam or porch ceiling can support a swing, seek professional help for installation. The manufacturer will not be liable for installation.