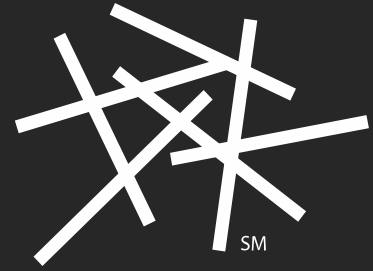 


hayneedle



ITEM NAME: Belham Living Avondale Outdoor Rocking Chair – Natural

SKU: NWF078-1



**For assistance with assembly, please contact
Hayneedle Customer Care Center
1-888-880-4884**

 
 
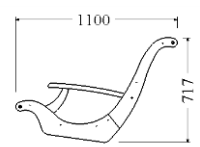 
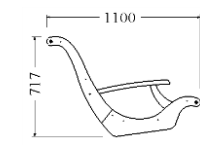 
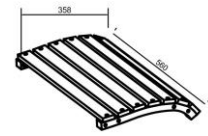 
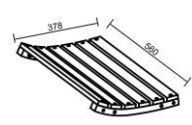 
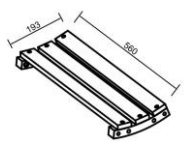 
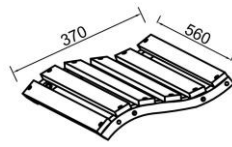 
PRE-ASSEMBLY PREPARATION:



 
 
THIS PACKAGE MAY CONTAIN SMALL ITEMS WHICH SHOULD BE KEPT AWAY FROM CHILDREN

- Please check that all parts and hardware are included before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Read through the preparation and assembly instructions in full before beginning assembly.
- Please use CAUTION AND CARE WHEN LIFTING the product to avoid personal injury and (or) damage to the product.
- For ease of assembly, two adults are recommended.
- Assembly time: Approximately 30 minutes.

 
 
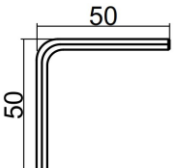 
PANEL AND FITTINGS IDENTIFICATION:

ID	PARTS	Q'TY
A	 Left Base	1Pc
B	 Right Base	1Pc
C	 Left Arm	1Pc
D	 Right Arm	1Pc
E	 Upper Back frame	1Pc
F	 Lower Back frame	1Pc
G	 Back seat frame	1Pc
H	 Front seat frame	1Pc

STEP-BY-STEP ASSEMBLY:

ID	PARTS	Q'TY
I	 <p>End rail</p>	2Pcs
J	 <p>Stretcher rail</p>	2Pcs

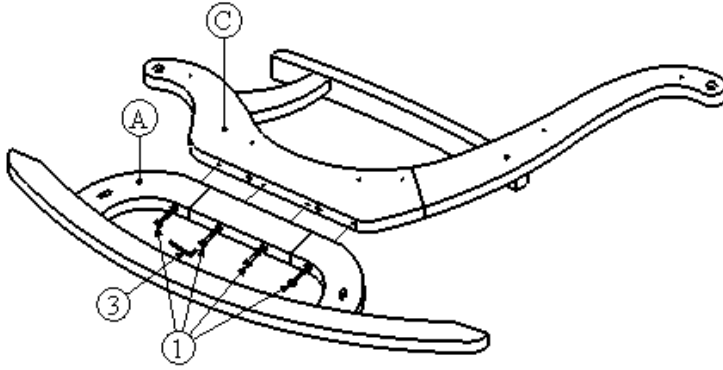 
HARDWARE LIST:


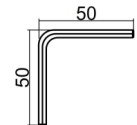 
ID	HARDWARE NAME	Q'TY
1	 <p>Screw M7 x 90</p>	16Pcs
2	 <p>Screw M7x 50</p>	16Pcs
3	 <p>Allen key</p>	2Pcs

STEP-BY-STEP ASSEMBLY:

1

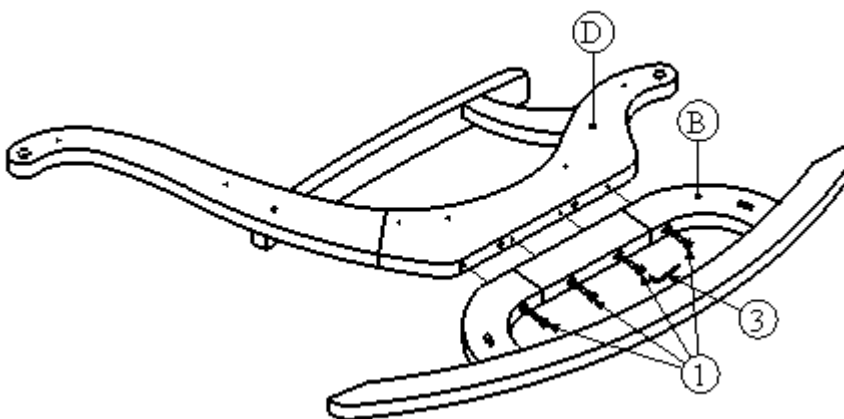 
STEP 1: Place the Left Base (A) and Left Arm (C) on the smooth and clean surface. Attach the Left Base (A) to the Left Arm (C), using Screws (1) and Allen Key (3).

 
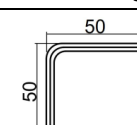 


ID	HARDWARE NAME	Q'TY
1	 Screw M7 x 90	4 pcs
3	 Allen key	2 pcs

2

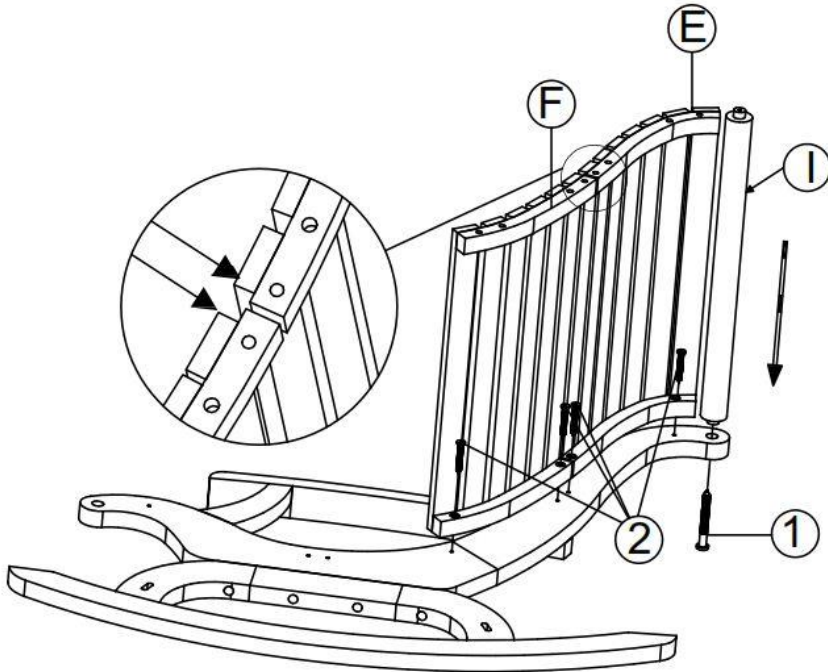 
STEP 2: Attach the Right Base (B) to the Right Arm (D), using Screws (1) and Allen Key (3).

 
 
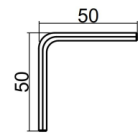 


ID	HARDWARE NAME	Q'TY
1	 Screw M7 x 90	4 pcs
3	 Allen key	2 pcs

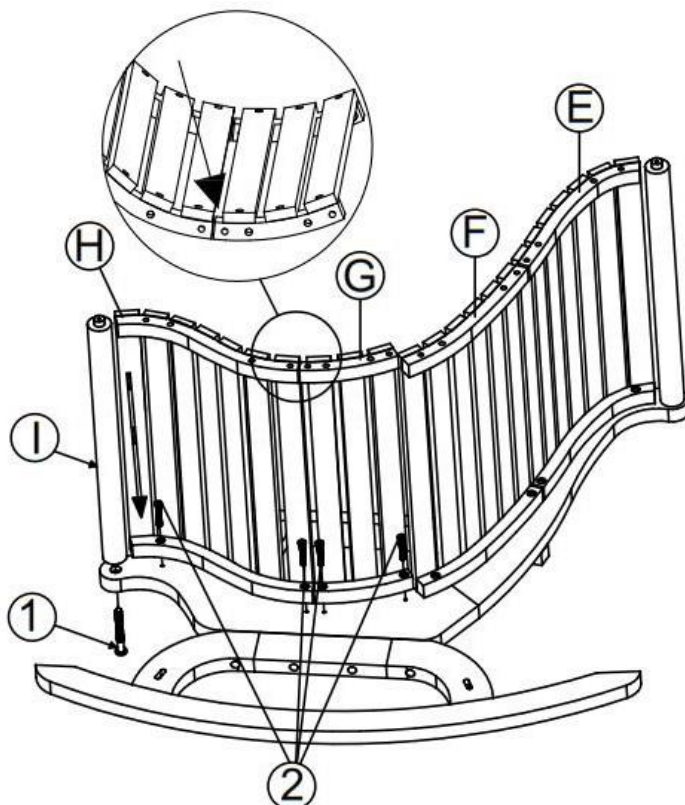 
STEP-BY-STEP ASSEMBLY:

 
 
 
- 3 STEP 3:** Use Screws (2) to attach the Upper and Lower Back Frame (E&F) to the Left Frame (A&C). Then using Screw (1) attach End Rail (I) to Left Frame (A&C). Tighten all Screws using Allen Key (3).



ID	HARDWARE NAME	Q'TY
1	 Screw M7 x 90	1 pc
2	 Screw M7 x 50	4 pcs
3	 Allen key	2 pcs

- 4 STEP 4:** Use Screw (2) to attach the Back and Front Seat Frame (G&H) to the Left Frame (A&C). Then using Screw (1) attach End Rail (I) to the Left Frame (A&C). Tighten all Screws using Allen Key (3).

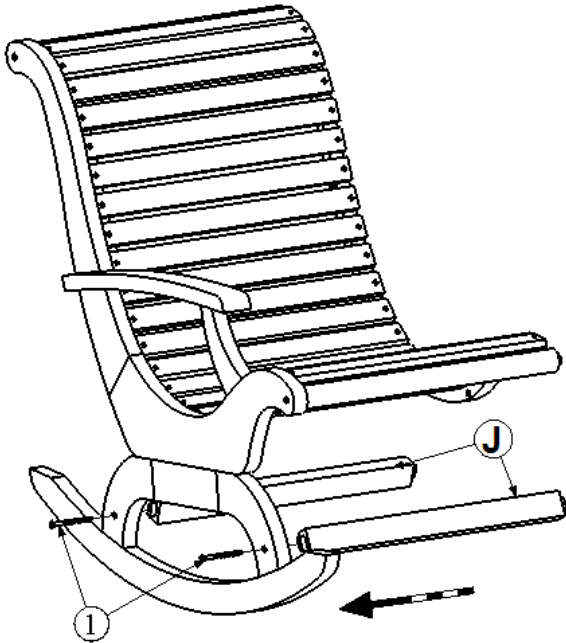 


 
 
ID	HARDWARE NAME	Q'TY
1	 Screw M7 x 90	1 pc
2	 Screw M7 x 50	4 pcs
3	 Allen key	2 pcs

STEP-BY-STEP ASSEMBLY:

5

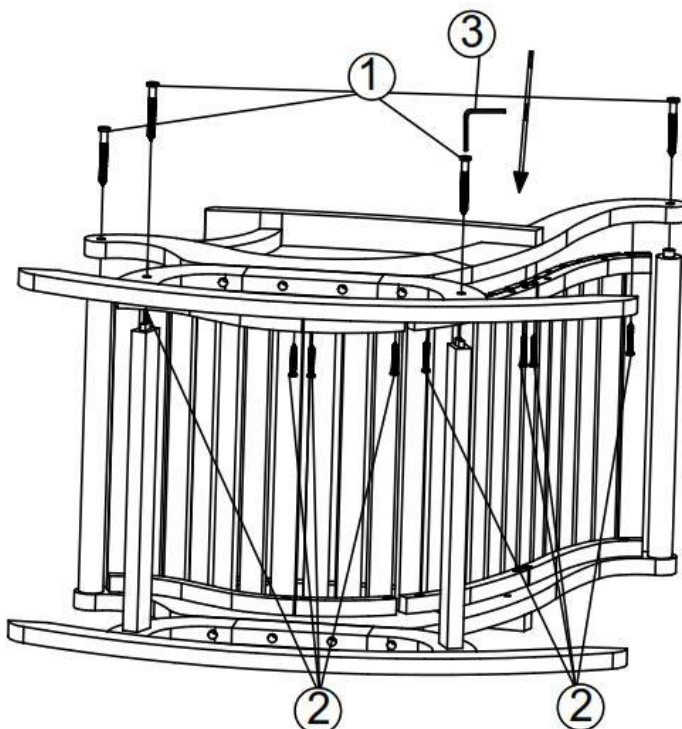 
STEP 5: Use the Screws (1) to attach the Stretcher Rail (J) to the Left Frame (A&C). Tighten all Screw using Allen key (3).

 

 


ID	HARDWARE NAME	Q'TY
1	 Screw M7 x 90	2 pcs
3	 Allen key	2 pcs

6

STEP 6: Use Screws (2) to attach the Right Frame (B&D) to the Back (E&F) and the Seat (G&H). Use Screws (1) to attach End Rails (I) and Stretcher Rails (J) to the Back (E&F) and the Seat (G&H). Tighten all Screws using Allen Key (3)



ID	HARDWARE NAME	Q'TY
1	 Screw M7 x 90	4 pcs
2	 Screw M7 x 50	8 pcs
3	 Allen key	2 pcs

MAINTENANCE AND CARE TIPS FOR OUTDOOR WOOD FURNITURE

The best way to preserve and extend the life of your outdoor wood furniture is to cover it with a waterproof cover when it's not in use, store it in a cool, dry place like a garage or shed during the winter months, and keep the wood hydrated with products like linseed oil a couple times per year. The less exposure your wood furniture has to sun, wind, rain, and snow, the longer it will last. Woods that are stained or painted should be sanded and re-stained or repainted as needed to protect the elements from penetrating the surface. Wood left in direct contact with wet surfaces will quickly become saturated and rot. When wood does get wet, dry it off as quickly as possible.

It's also important to place your outdoor wood furniture on a surface where water won't pool. A patio or deck is an ideal spot, and you should consider paving stones or a bed of rocks for wood furniture out in the garden. Wood left in direct contact with wet surfaces will quickly become saturated and rot. When wood does get wet, dry it off as quickly as possible or leave it out in the sun to dry.

Frequently exposed to harsh conditions or damp surfaces, wood furniture will begin to show signs of wear and deterioration. Signs of damage may include checking (cracking or splitting), swelling, rotting, and discoloration. In addition to protective covers and off-season storage, you can further prevent this type of damage by keeping woods well-hydrated with products like linseed oil. Saturate your furniture with the oil several times per year. Well-oiled wood will be better-protected from the elements and will retain its color and smooth surface longer. Woods that are stained or painted should be sanded and re-stained or repainted as needed to protect the elements from penetrating the surface.

Take time to learn more about how your particular type of wood tends to weather. Some woods, like pine, will require frequent staining or oiling, while a wood like cedar has natural oils that make it resistant to cracking and moisture rot. Woods like teak will turn a silver grey when left untreated, and many outdoor wood furniture owners look forward to this transformation.

Finally, dirt build-up leads to deterioration, so keeping your outdoor wood furniture clean will give it a longer life. Clean it well two or three times per year with water, mild soap, and a soft cloth. (This is also the perfect time for a periodic hardware check.) We recommend using a product specifically designed for cleaning wood furniture. Hose it down before you start to remove cobwebs and caked-on dirt. Do not use abrasive cleaners, bleach, or scouring products that will affect the finish. Dry the furniture thoroughly when done. Poolside furniture should be hosed down after each use to minimize chlorine damage.