


 TREASURE GARDEN

# **AG5A** 8.5'SQ **Cantilever**

*Assembly and Operation Guide*

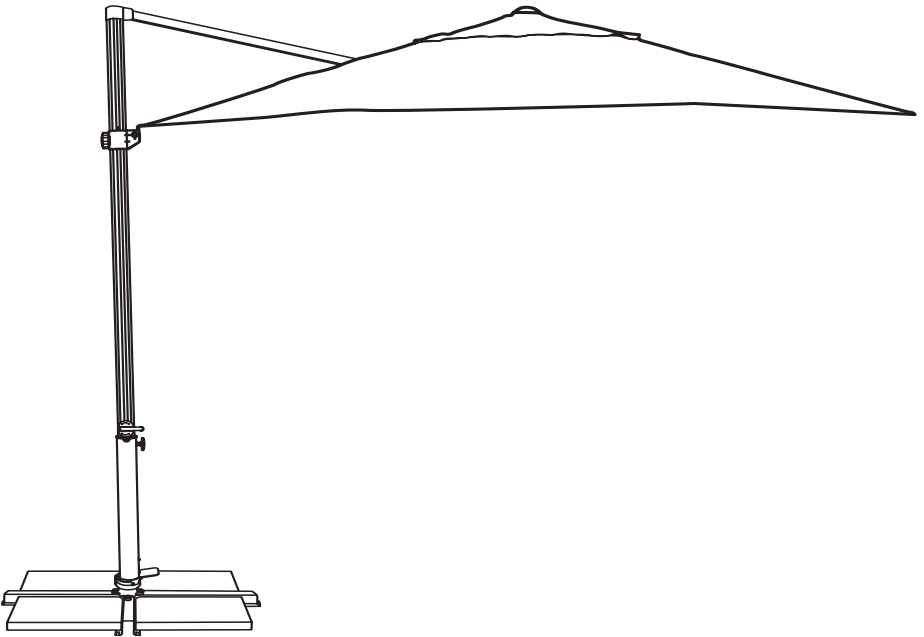


Thank you for your purchase of Treasure Garden's AG5A Cantilever Umbrella.

Please remove all contents from the package, inspect and review checklist.

**CAUTION:** To reduce personal injury and damage to your AG5A, read and follow this assembly and operation guide. We recommend a two-person team for assembly and disassembly. *Save information for future reference.*

### AG5A CHECKLIST

- A** - Cross Bars (2)
- B** - Rotation Hub
- C** - Column
- D** - Knob
- E** - Crank Lift Handle
- F** - Main Frame
- G** - Adjustment Knob
- H** - VEGA™ Light Adapter
- I** - Canopy

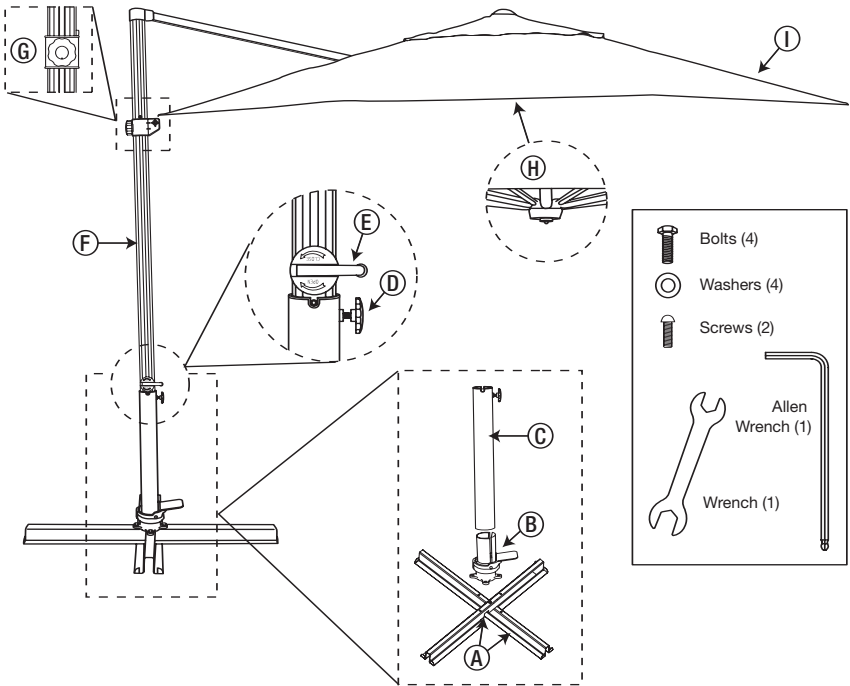

### REQUIRED FOR ASSEMBLY:


- One (1) 1/2" socket wrench or adjustable wrench.
- Four (4) 50 lb. weights - square stones or concrete weights. (200 lb. total weight needed for support - **weights not included**) Stones & weights, standard sizes can be used up to 20" L x 20" W x 1.5" H.

**NOTE: Using the cross bar stand without weights will damage your umbrella and may cause injury.**


## STEP 1 Assemble Cross Bar Stand

Assemble the umbrella base by connecting both sections in a cross (Fig. 1). Place the rotation hub on the connected crossed base and fasten (4) four hexagon bolts with the hexagon wrench (both supplied) (Fig. 2). Insert the column into the rotation hub and then fasten (2) two screws with the socket wrench (both supplied) (Fig. 3). Secure umbrella base with (4) four square stones or concrete weights (weights not included).


**IMPORTANT: Cross bar stand will not support umbrella without proper weights. Using the stand without weights will damage your umbrella.**

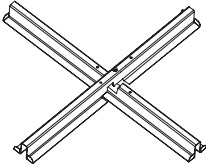

(Fig. 1)

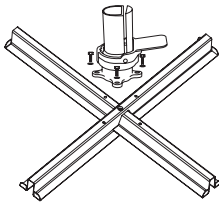

(Fig. 2)

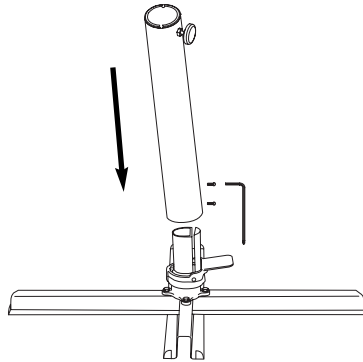


(Fig. 3)

## STEP 2 Assemble AG5A Frame


**NOTE:** *Two persons may be needed for the following action.*


Lift the AG5A up and insert the main frame into the column until it locks into place (Fig. 4). Secure the canopy at the same direction with the foot pedal on the rotation hub, and then loosen the umbrella tie.

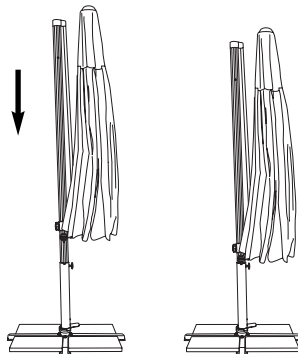


(Fig. 4)


### STEP 3 Opening AG5A

In the closed position (see below), turn the crank lift handle clockwise  and slide the adjustment knob upward until the canopy is fully opened and the slider is at the top most position (Fig. 5). Now the umbrella is ready to use.

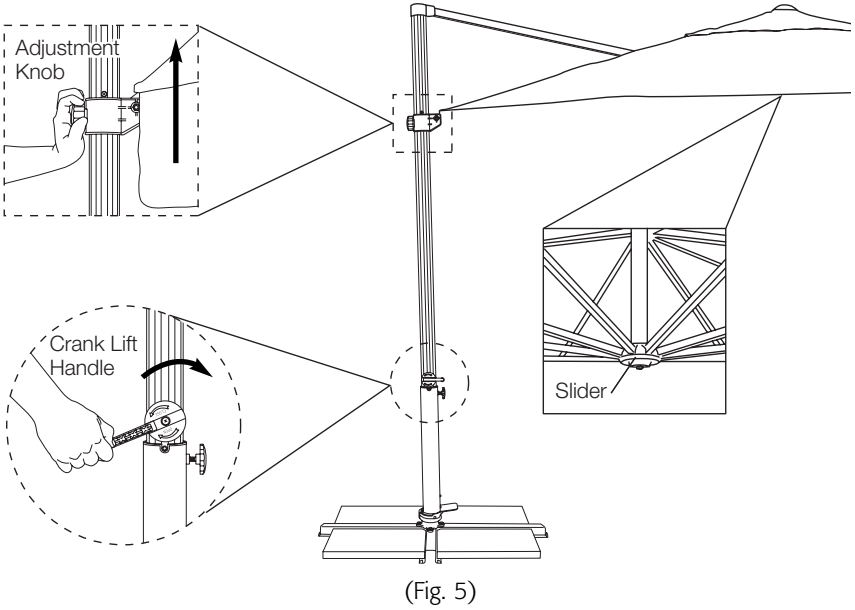


### STEP 4 Closing AG5A Canopy

Slide the adjustment knob downward and turn the crank handle  counter-clockwise until the canopy is fully closed.

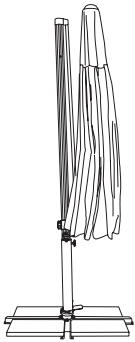

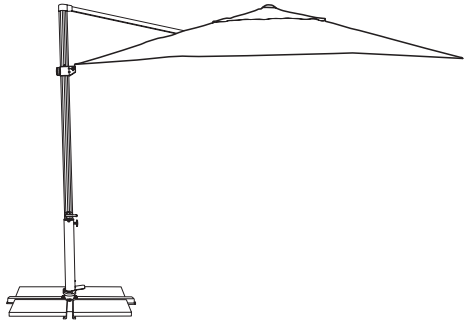


CLOSED



OPENED


### STEP 5 Adjusting AG5A Height and Tilt

Loosen the adjustment knob counter-clockwise  (Fig. 6) to adjust height and tilt. Slide the adjustment knob up or down to adjust the umbrella to your desired height and angle. Tighten the adjustment knob clockwise  to lock its position.

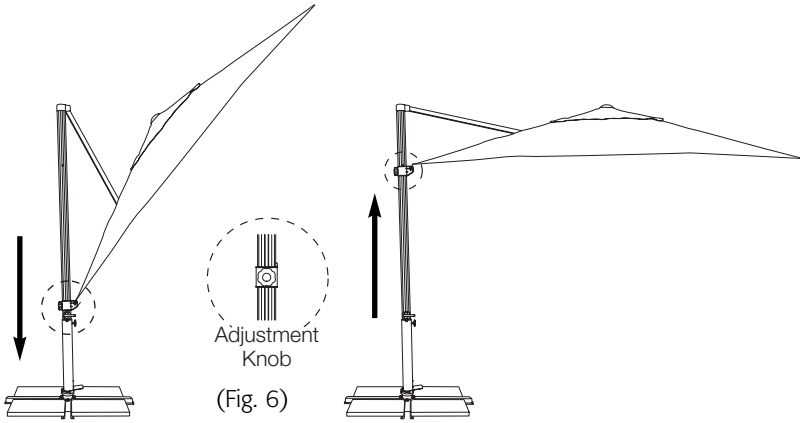


### STEP 7 360° Rotating Hub Swivel

Place your foot on the foot pedal of the rotating hub and *step-on* the pedal to release rotating lock (Fig. 7). Place hands on the main frame (Fig. 8) and rotate the umbrella frame in either direction, in 90° increments (Fig. 9). To lock position, step off the foot pedal to engage rotating lock.

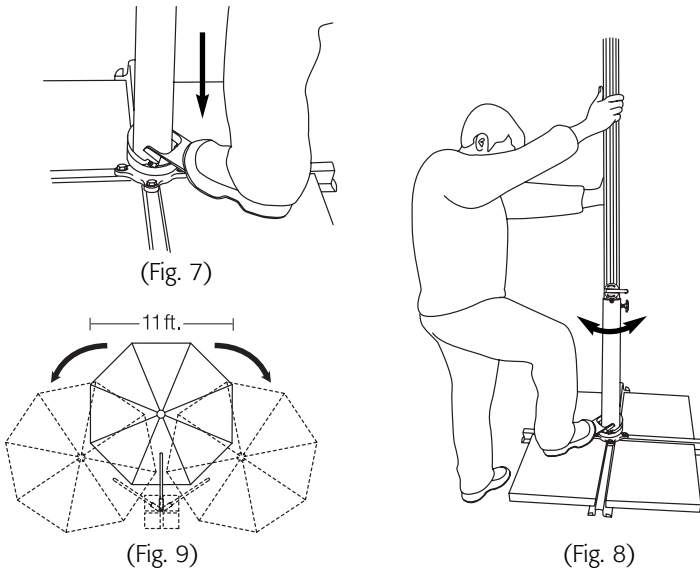


### To ATTACH VEGA Umbrella Light:


Loosen the VEGA light adapter built into the umbrella runner by turning counter-clockwise  (Fig. 10). After loosening, pull down light adapter post (Fig. 11) to attach the VEGA umbrella light (sold separately).

### To OPEN and ATTACH VEGA:


Open the VEGA umbrella light by holding firmly with one hand and then depress the clamp release button with the other hand to release the clamp lock. Open up the VEGA light and clasp around the light adapter post (Fig. 12). Snap to close (Fig. 13).

### To REMOVE VEGA and CLOSE adapter:


Hold the VEGA umbrella light, depress the clamp release button to release the clamp lock. Remove VEGA umbrella light, and gently push up the light adapter post back into umbrella runner and tighten turning clockwise .

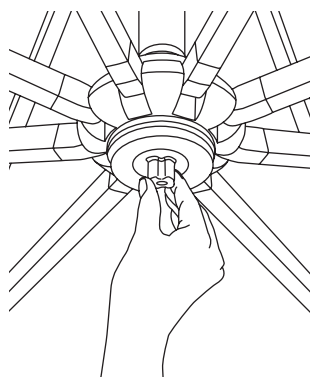


(Fig. 10)

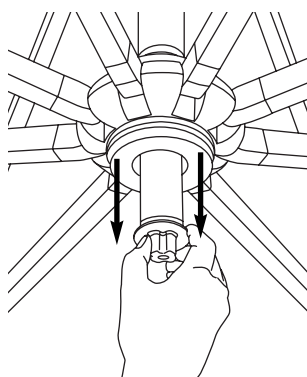

(Fig. 11)

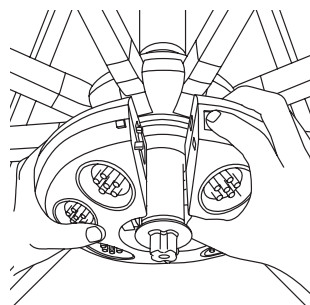

(Fig. 12)

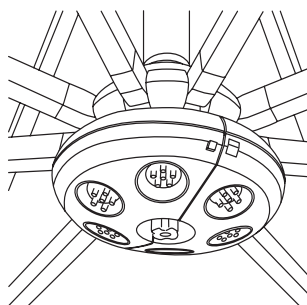

(Fig. 13)

## WARRANTY:

Treasure Garden warrants this product (in residential use) to be free from defects in original materials and workmanship for a period of 1 year from the date of purchase. If a defect in the original material or workmanship appears during the warranty period; Treasure Garden will (at its option) repair or replace the product without charge. Limited warranty of 4 years against fabric fading.

Simply contact your original authorized Treasure Garden dealer with a description of the defect. The dealer will verify the defect and work closely with Treasure Garden to obtain the necessary service. In many cases, simple problems can be solved with a replacement part that can be shipped directly to the dealer for professional installation/repair.

In the event that warranted factory service is required, Treasure Garden will assume the responsibility of the return freight charges on warranted product for the first year only.

Returned product that (upon receipt and inspection) is deemed to be "not covered" under our warranty, will be shipped/billed at your expense.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

**NOTE:** Failure caused by unreasonable or abusive use, or failure caused by neglect of reasonable and necessary care are not covered by this warranty.

Additionally, acts of nature (including but not limited to wind, hurricanes, tornadoes, and storms) are not covered by this warranty.

## S A F E T Y P R E C A U T I O N S :

- Close the umbrella in windy conditions or when a storm approaches. Never allow the umbrella to flap in the wind; this could damage the canopy.
- Do not leave open umbrella unattended. If damage occurs, this is not covered by the warranty.
- When adjusting the umbrella, make sure that no person(s) or item(s) are close to the umbrella. This is important to prevent injury or material damage.

## C A R E A N D M A I N T E N A N C E :

- When not in use, close and cover umbrella with a protective cover (sold separately).
- Allow a wet canopy to dry opened up.
- If necessary, clean the fabric with lukewarm water, mild detergent, and a sponge.
- Wipe sliding marks on the aluminum poles with a damp cloth.

### Winter Storage:

- Store in a dry, protective place.
- Any visible defects must be repaired by a professional.

### After the Winter:

- Areas subject to turning and sliding can be treated with a non-staining lubricant spray (silicone-based).
- Check the condition and function of the umbrella. Any defects must be repaired by a professional.



[www.treasuregarden.com](http://www.treasuregarden.com)

©2011 Treasure Garden, Inc. - All Rights Reserved.

Initial 7/11