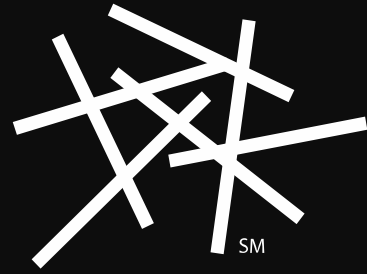 
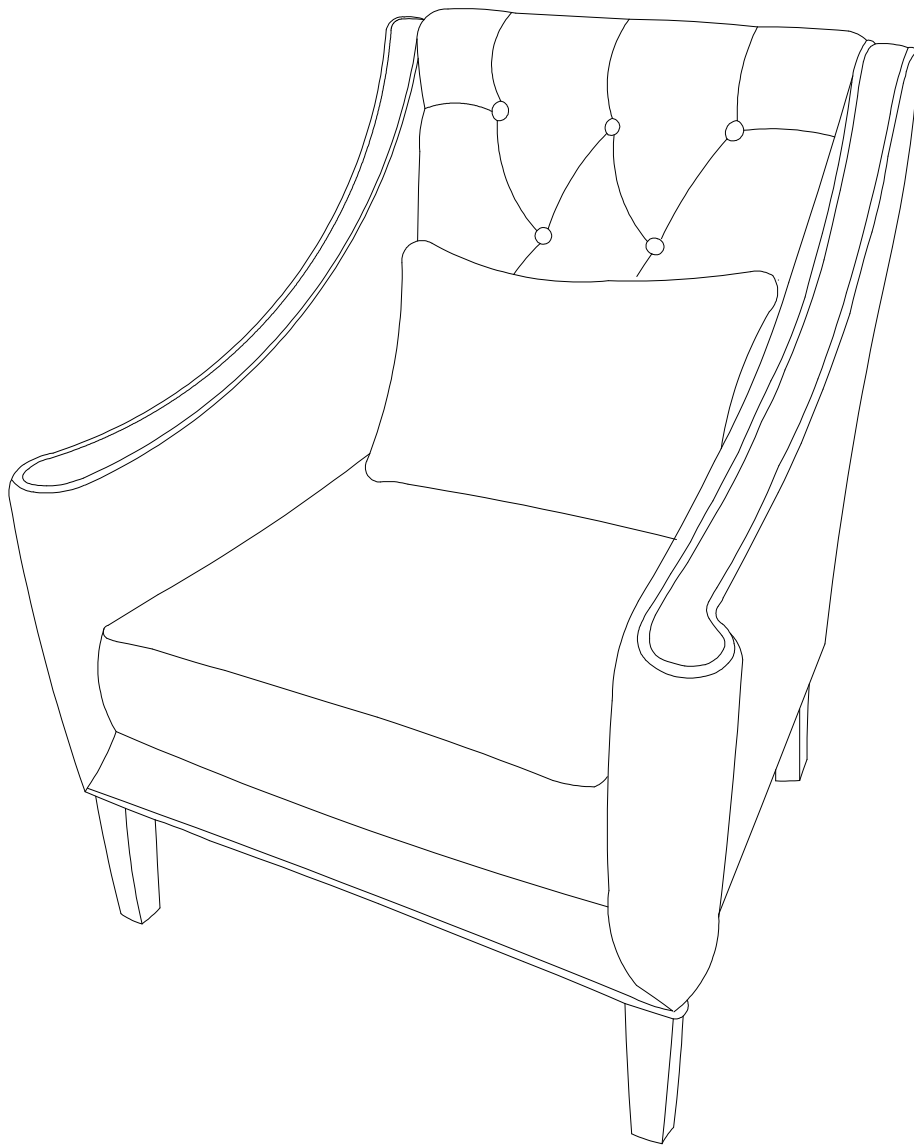 


hayneedle



ITEM NAME: Belham Living Avery Arm Chair With Back Pillow

SKU: REDU116



For assistance with assembly, please contact customer service
1-888-880-4884

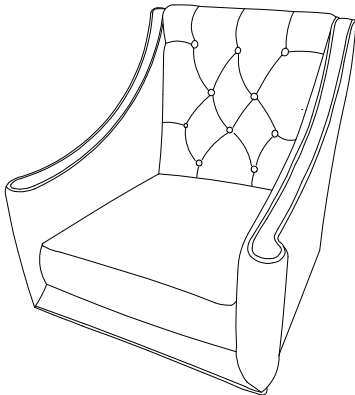 
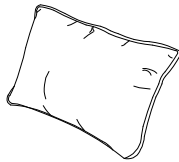 
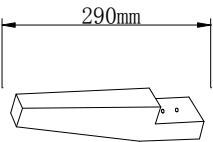 
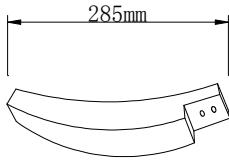 
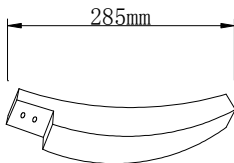 
PRE-ASSEMBLY PREPARATION:



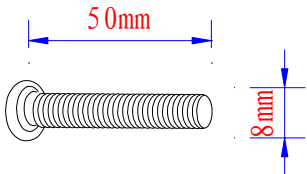 
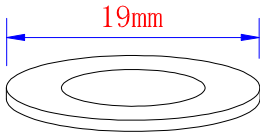 
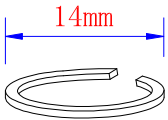 
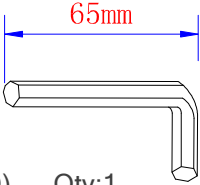 
DO NOT LET CHILDREN PLAY IN OR AROUND THE UNIT DUE TO THE POSSIBLE RISK OF FINGER ENTRAPMENT

- Please read through this instructions before beginning assembly.
- Two adults recommended for assembly.
- Clear out the space for assembly and lay out all parts based on Parts List, extra room will allow you to easily determine if all the pieces are present.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children until fully assembly.
- Please check for any loose screws and tighten them before you use.

PANEL AND FITTINGS IDENTIFICATION:

 <p>Chair (1) Qty:1</p>	 <p>Pillow (2) Qty:1</p>	 <p>Front Leg (3) Qty:2</p>
	 <p>Left Back Leg (4) Qty:1</p>	 <p>Right Back Leg (5) Qty:1</p>

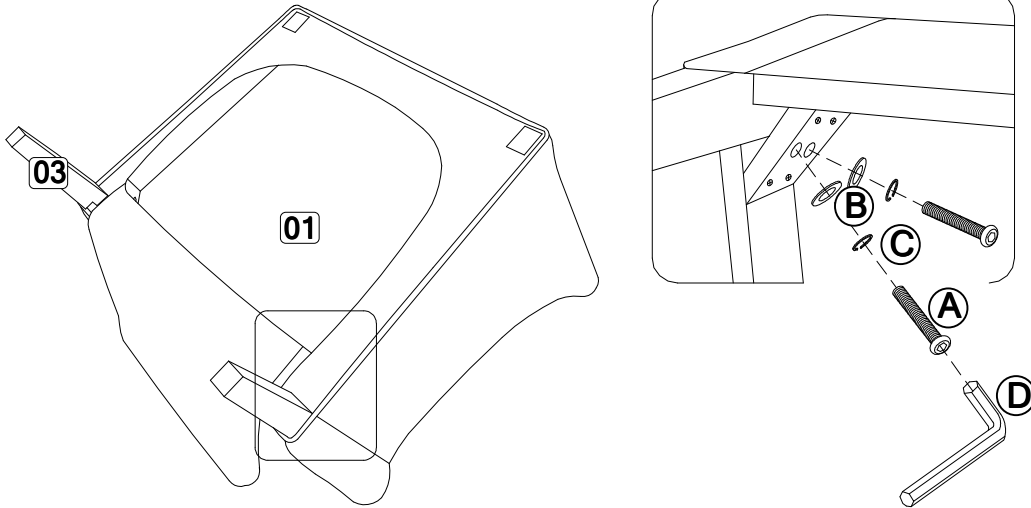 
HARDWARE LIST:

 <p>Bolt (A) Qty:8</p>	 <p>Flat Washer (B) Qty:8</p>
 <p>Spring Washer (C) Qty:8</p>	 <p>Allen Key (D) Qty:1</p>

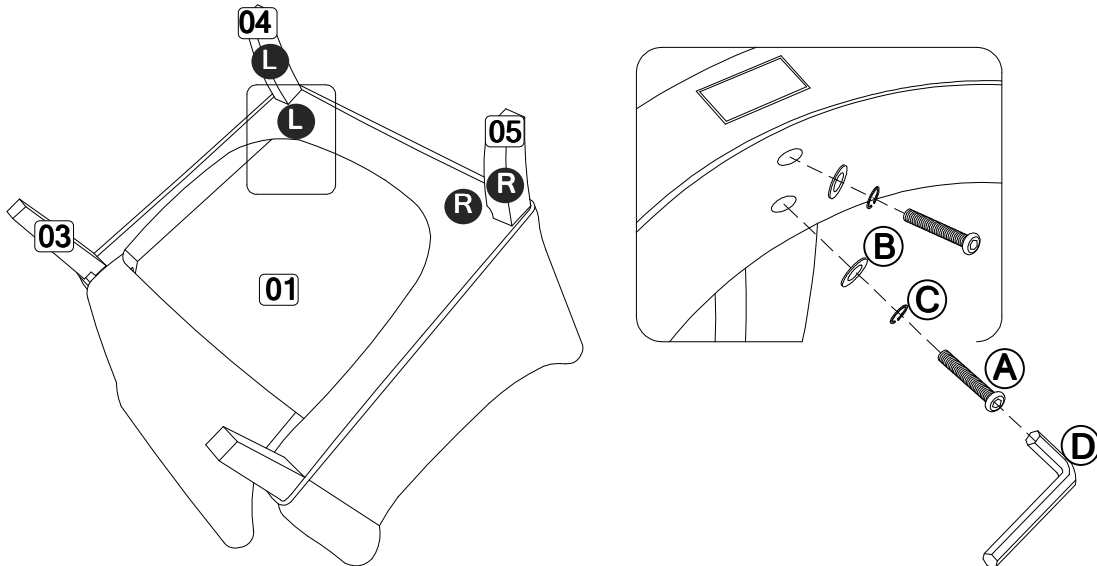 
STEP-BY-STEP ASSEMBLY:

Please follow directions closely as all pieces are marked specifically and must be assembled as shown

- 1** STEP 1: Lay the Chair (1) on its side on the flat floor. Secure the Front Leg (3) to Chair (1) with the Flat Washer (B), Spring Washer (C), and Bolt (A) by using Allen Key (D) clockwise. Don't tighten yet.



- 2** STEP 2: Secure the Back Leg (4 and 5) to Chair (1) with the Flat Washer (B), Spring Washer (C), and Bolt (A) by using Allen Key (D) clockwise. Then Level the Chair and tighten all bolts securely.



MAINTENANCE AND CARE TIPS:

- Check and re-tighten screws/bolts after the product has been used for a period of time.
- Dust with a soft cloth moistened with a polish, as the polish will help eliminate the scratching that occurs with dry dusting.
- Soap and water are not advisable for wood surfaces.
- It is best to keep your furniture in a climate controlled environment. Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as it may damage the finish.
- Do not stand on the unit as it with a soft surface to load the weight of body.