




ASSEMBLY INSTRUCTION

- Tool needed : Allen Key, Wrench
- Parts List :
- Seat assembly - 1
 - Back assembly - 1
 - Armrest - 2
 - Armrest support - 2
 - Chain hardware - 1 set
 - Front Eye bolt (long) - 2
 - Rear Eye bolt (short) - 2
 - Short Bolt / nut - 6
 - Long Bolt / nut - 4






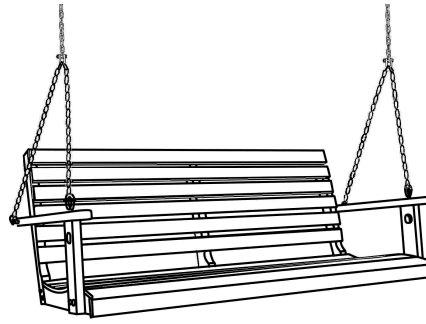


Step 1, Tighten all the screws on the seat and the back assembly by Philips head screw driver before assembling this swing.

Step 2. Align the seat and back assemblies by putting the notches together. Bolt the cleats together with 6 short bolts, washers and nuts by allen key and wrench. Semi tighten.

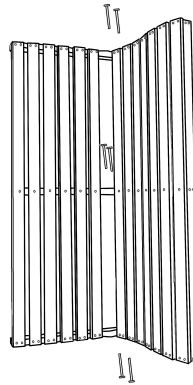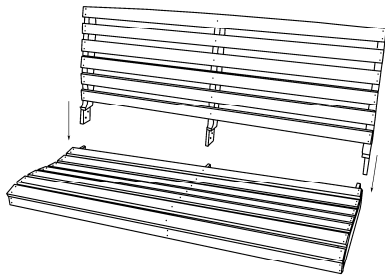

Step 3. Attach two armrest supports to the seat assembly with long bolts and nuts. Semi tighten. Fix armrest to armrest support and the back with eye bolts. Fasten nuts with washers and bolts as per the below sketch.

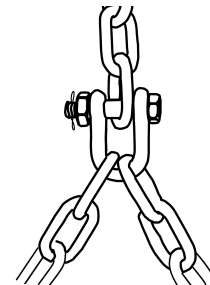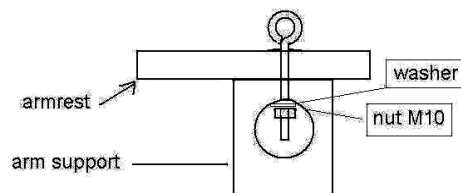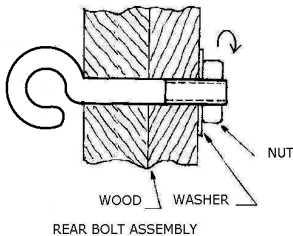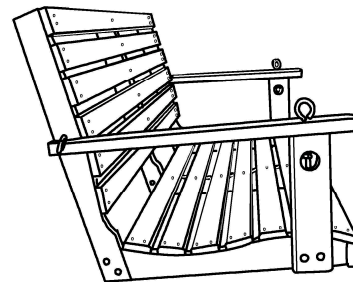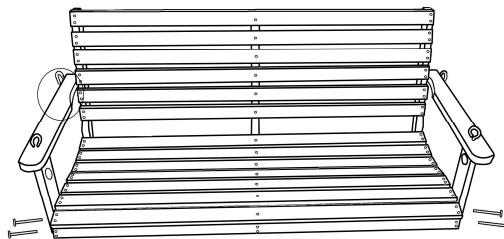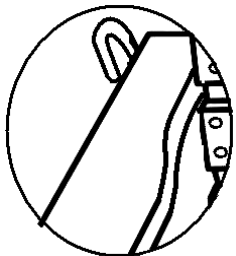

REAR EYE BOLT ASSEMBLY

FRONT EYE BOLT ASSEMBLY

hanging the chains with D shackle

Tighten all bolts, but do not over-tighten.

Hanging the swing with chains as per the above sketch.

Shorter chain is connected to front eye bolt, middle size chain is connected to rear eye bolt. Longer chain is connected to D shackle and hooks on ceiling.

After the swing has been exposed to weather for a period, it may be necessary to re-tighten the bolts and screws and maintain the swing with furniture oil or PAINT.

