



Cedar Planter Box


(PL30 – assembled / PL30U –unassembled kit)

Tools: #2 Philips or Robertson driver.

Before Assembly: Please check all components with content list.

Package Contents:

- (A) Side Slat (a)...38 (eased edge)
- (B) Bottom Slat (b)...15
- (C) Short Rail...4
- (D) Long Rail...4
- (E) Posts...4

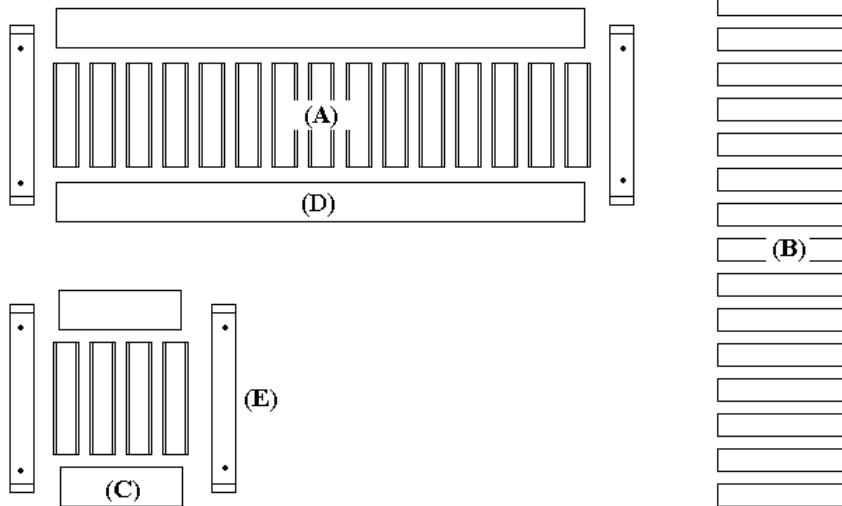


Hardware

- 4" screw...16
- 1/2" Wood Spacer Block...2


STEP 1. Build Short Sides

- Locate 4 pieces of side slat (a). Insert ends into slot in short rail (c).
- Slide a 2nd short rail (c) over free end of slats.
- Repeat this step to assemble other short side.
- HINT: tight fitting slats can be eased by rubbing ends with a small amount of candle wax.

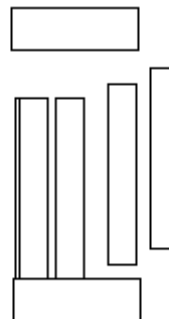


STEP 2. Build Long Sides

- Locate 15 pieces of side slat (a). Insert several of the slats into slot in long rail (d).
- Slide a 2nd long rail (d) over free end of slats.
- One by one, slip the remaining slats between the rails until all 15 pieces have been inserted.
- Repeat this step to assemble other side.

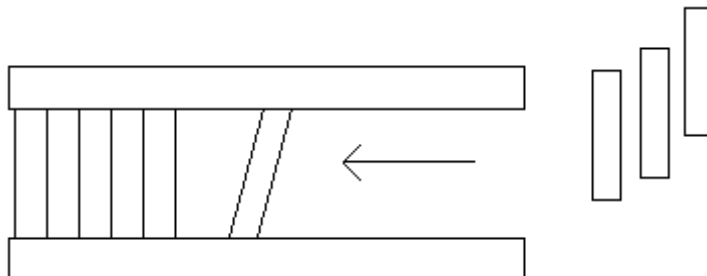


STEP 3. Attach Posts

- Stand side assembly between 2 posts (centered).
- Next, Slip 2 spacer blocks under the side assembly to create bottom spacing as illustrated.
- Attach posts (e)(centered on both ends of assembly) using 4 inch screws.
- (Note: posts have 2 heights of pre-drilled holes when viewed from each side. Position posts so that holes are at identical height when viewed from front.)
- Repeat this step to make other wall.

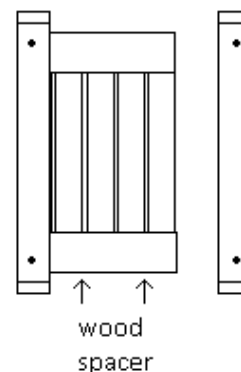

STEP 4. Assemble Walls

- Form a corner by attaching a short side assembly to open face on post.
- Attach side assembly to post using 4 inch screws.
- Repeat this step to attach other side assembly.
- Attach remaining wall using 4 inch screws.

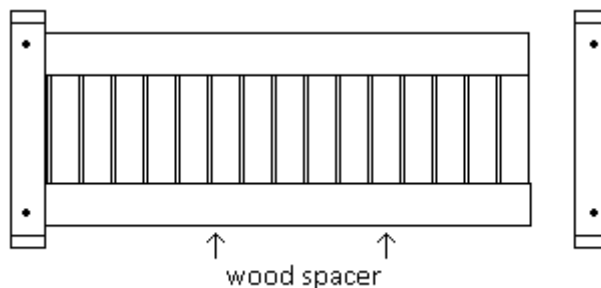

STEP 5. Insert Bottom Slats

- To complete assembly simply place the 15 bottom slats (B) into the planter so ends rest on the inside lower rail lip. (no attachment is required)
- A small gap will remain along inside lip for water drainage.
- Enjoy your new planter.

