

Product: Adirondack Rocker (C04)

Your purchase and who is C. R. Plastic Products Inc?


C. R. Plastic Products Inc. is an environmentally conscious Canadian company. Our "Generation Line" of recycled furniture will give you years of comfort, style and maintenance free enjoyment. You will find your furniture to be waterproof and durable. By choosing this product, you are saving generations of trees and are reducing the burden on our landfill sites. Thank-you for purchasing from C. R. Plastic Products Inc.

Parts:

1. Seat (A)
2. Back (B)
3. Arm and Front Leg (C)(2)
4. 2 Small Triangle Blocks(D)
5. Bag of Screws 38 #8x 1 1/2" (D)
6. 2 Rocker Runners (Left and Right) (E)
7. Two Rear Legs (F)

You will need:

1. Drill
2. #2 Robertson or Phillips screw driver

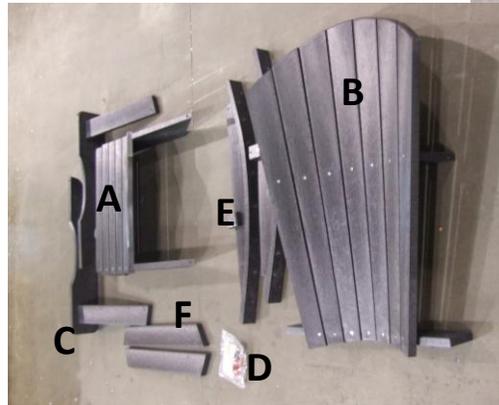

Note: Assembly is best done with 2 people.



Step 1: Place Rear Leg (F) onto the block side of Runner (E). Line up the Rear Leg to the scribe mark on the Runner(E), and fasten together with one screw. The countersink should face up so screw sits flush and the Rear Leg sits vertical as pictured.



Step 2: Stand up Rear Leg and Runner assembly and place the proper Arm (C) on the assembly. Front Leg and Arm go to the side of the Runner that does not have the support block. The Front Leg will line up to the line scribed on the top of the runner.



Step 3: Line up the back of the Arm (C) to the back of Rear Leg (F) and fasten together with a screw. Place a Small Triangle Block under the Arm (as shown left) and make sure it is flush with the underside of the arm, and lined up to the pilot hole in the Rear Leg. Secure it by placing a screw upwards into the arm, then place a screw through the hole in the Rear Leg into the Arm.



Step 4: Place a screw into the Front Leg by placing it in the bottom of the Runner.

Repeat Steps 3 and 4 for the other Arm and Runner Assembly.

Step 5: Lay one Arm and Runner assembly on the ground with the Arm facing down. Place the Seat (A) with the rear of the side supports under the Rear Leg (F) and the front of the Seat side on top of the Front Leg(C), and place 1 screw through the underside of the seat into the proper peck mark on the front leg. Then place a screw through the support block into the seat support. Place a screw through the Runner into the seat support and tighten. Flip chair over and repeat for



Front Leg,
Seat,
Runner



Rear Leg, back of
Seat side Support
and Runner



Step 6: When the Seat is fastened to both Arm and Runner assemblies place the rest of the screws into the Front Legs under the Seat, and at the bottom of the seat supports. Then stand up the chair and place the screws through the bottom of the seat supports into the top of the Runners.



Step 7: Place the Back(B) onto the Seat. Line up the bottom back brace so the screws will not miss the seat supports. Put one screw in each side. Now centre the holes on the upper back brace over the tops of the Rear Legs and secure with four screws. Put the remaining screws into the bottom brace.

Note: Care should be taken to not over tighten the screws. Having someone assist during assembly will ease construction.

With proper assembly our furniture will provide years of enjoyment with little maintenance.