

Product: Addy Dining Side Chair (C11)

Your purchase and who is C. R. Plastic Products Inc.?


C. R. Plastic Products Inc. is an environmentally conscious Canadian Company. Our "Generation Line" of recycled plastic furniture will give you years of comfort, style and maintenance free enjoyment. You will find your furniture to be waterproof and durable. By choosing this product, you are saving generations of trees and are reducing the burden on our landfill sites. Thank-you for purchasing from C. R. Plastic Products Inc.

PARTS

1. Right Side Leg
2. Left Side Leg
3. Long Stringer
4. Short Stringer
5. Seat
6. Back
7. Screws (12 - 2½", 6 - 2")

YOU WILL NEED:


1. Drill
2. #2 Robertson (Square) or Phillips bit.

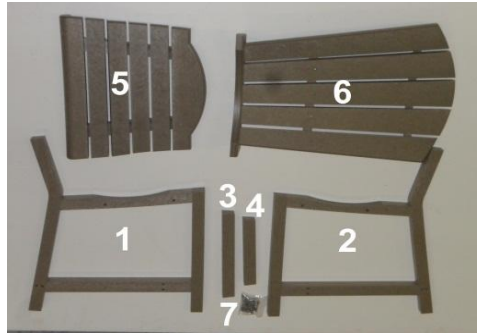

Step 1: Begin by taking the right side leg (1) and lining up the long stringer (3) to the scribe line. Attach the stringer using two 2½" screws. The stringer is tapered so the front of the chair will be wider than the back. Repeat with the left side leg (2).



Step 2: Next take the small stringer (4), line the height up with the side cross pieces and screw it into place using four 2½" screws.

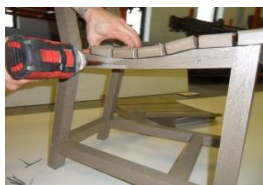

Step 3: Set the seat (5) on the frame and push toward the back. Attach with two 2½" screws per side as shown in picture.



Step 4: Set the back (6) in place so the brace is resting on the back legs. Make sure bottom brace is in line with the rest of the seat slats. Attach back using two 2" screws to the top of back legs.



Step 5: Hold the bottom of back towards back legs and attach the back from bottom of the seat using two 2". Repeat on other side.