



hayneedle

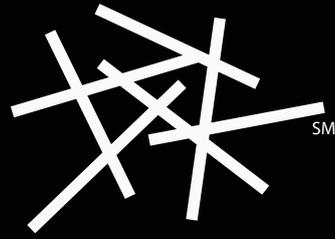

Item Name: Grayson Tufted Rocking Chair

SKU: DIME012-1

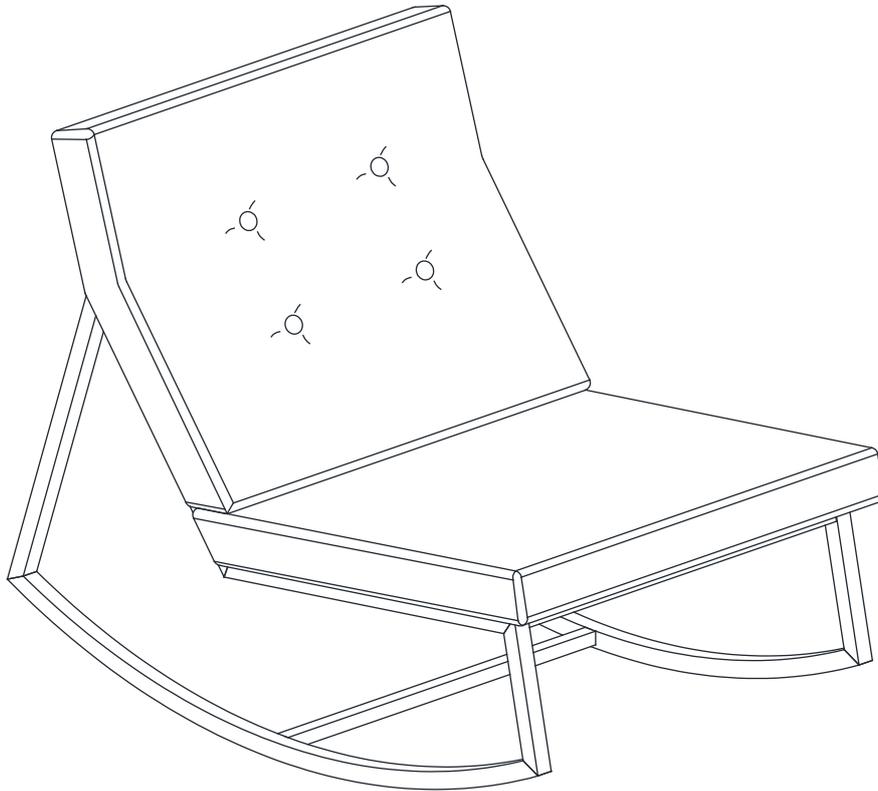

For assistance with assembly, please contact
Hayneedle Customer Care Center
1-888-880-4884

PRE-ASSEMBLY PREPARATION:



WARNING: Failure to follow these directions and warnings can result in serious injury and/or product damage.


- Please check that all parts and hardware are included before beginning assembly.
- Save all packing material until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Read through the preparation and assembly instructions in full before beginning assembly.
- Please use CAUTION AND CARE WHEN LIFTING the product. Assistance is required for assembly.
- Never stand on the rocking chair or use it as a ladder.
- Periodically re-tighten all exposed hardware.
- If any parts become missing, damaged or worn, discontinue use until they are replaced with identical parts.

PARTS LIST


Part	Drawing	Part Name	Qty.	Part	Drawing	Part Name	Qty.
A		Right Frame	1	E		Back Cushion	1
B		Left Frame	1	F		Short Bolt (1/4" x 3/4")	12
C		Cross Rail	3	G		Long Bolt (1/4" x 1")	8
D		Seat Cushion	1	H		Allen Wrench	1

STEP-BY-STEP ASSEMBLY:

Step 1 - Place the Left Frame (Part B) on a flat surface with the connection tabs facing up. Align the ends of the Cross Rails (Part C) with the connection tabs on the Left Frame like shown below. Slide the ends of the Cross Rails over the connection tabs on the Left Frame until the bolt holes are aligned. Insert two Short Bolts (Part F) through each of the bolt holes in the Cross Rails and into the corresponding threaded holes in the Left Frame connection tabs. Partially tighten the Bolts using the Allen Wrench (Part H). **(Please Note: It is important to leave the Bolts slightly loose until further instruction.)**

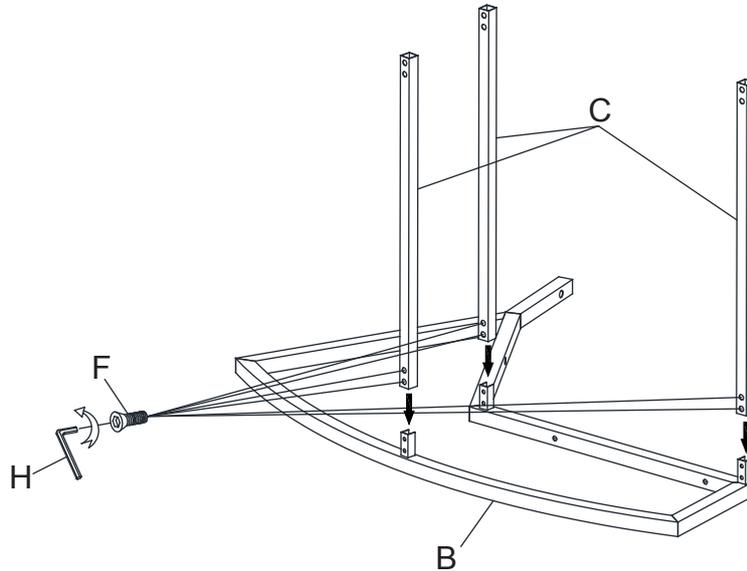


Step 2 - With the Left Frame still lying on a flat surface, align the connection tabs on the Right Frame (Part A) with the open ends of the Cross Rails like shown below. Slide the connection tabs into the ends of the Cross Rails until the bolt holes are aligned. Insert two Short Bolts (Part F) through each of the bolt holes in the Cross Rails and into the threaded holes in the Right Frame connection tabs. Partially tighten the Bolts using the Allen Wrench (Part H). **(Please Note: It is important to leave the Bolts slightly loose until further instruction.)**

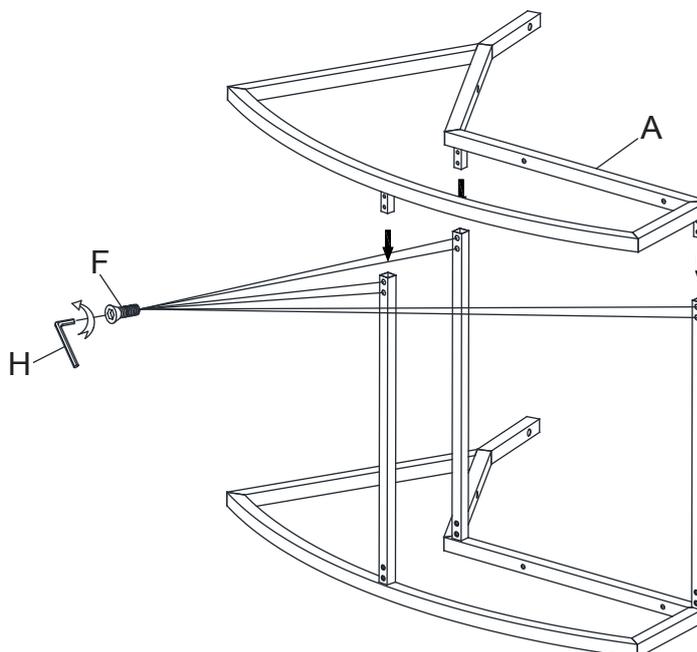


STEP-BY-STEP ASSEMBLY:

Step 3 - With help, turn the loosely assembled frame onto its back like shown below. Align the bolt holes in the Right and Left Frame with the corresponding threaded inserts located on the bottom of the Seat Cushion (Part D). Insert four Long Bolts (Part G) through the bolt holes in the assembled frame and into the Seat Cushion. Partially tighten the Bolts using the Allen Wrench (Part H).

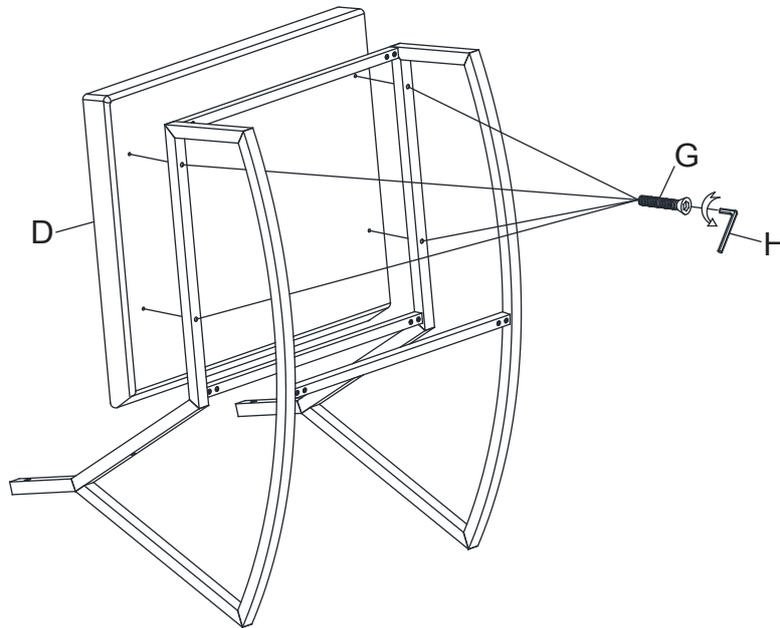

Step 4 - With help, set the partially assembled chair in its upright position. Align the bolt holes in the Right and Left frame with the corresponding threaded inserts located in the Back Cushion (Part E) like shown below. Insert four Long Bolts (Part G) through the bolt holes in the Right and Left frame and into the Back Cushion. Tighten all the Bolts, including those inserted in Steps 1, 2, and 3, using the Allen Wrench (Part H). Do not over tighten the Bolts.

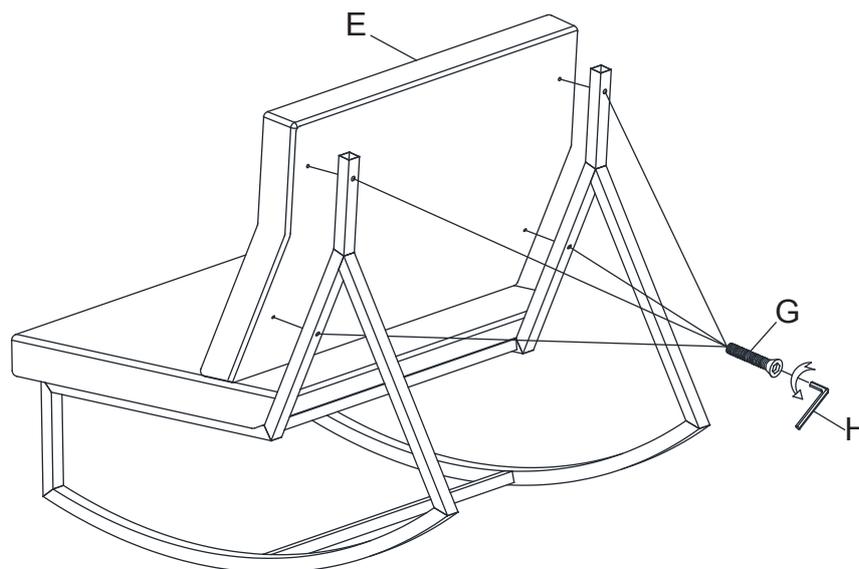

Assembly is now complete!



For assistance with assembly, please contact customer service
1-888-880-4884