







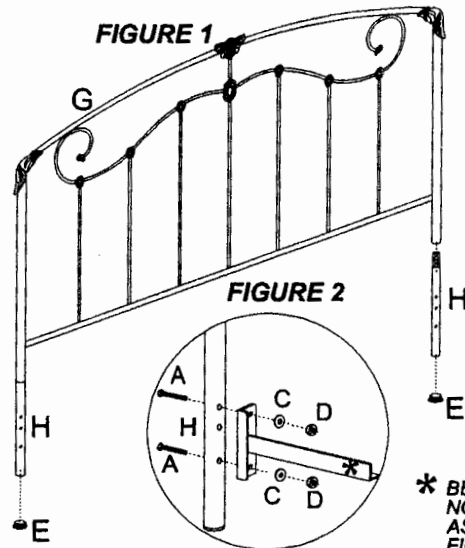
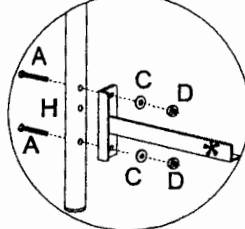
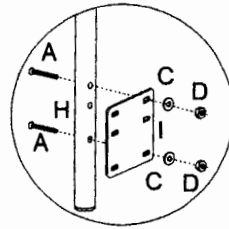
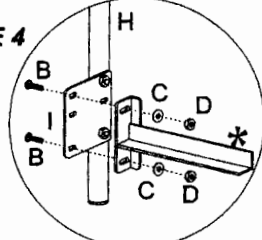
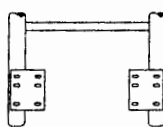


**MADDIE HEADBOARD**  
 Model # 325-49 Queen, Full Size

Customer Service  
 Phone Number:  
 502 562-0000  
 1-19-05

UNLESS OTHERWISE STATED, PLEASE DO NOT TIGHTEN BOLTS (AND/OR) SCREWS UNTIL UNIT IS COMPLETELY ASSEMBLED. Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required. Online Parts Request Form: [www.hillsdalehouse.com/parts\\_request.html](http://www.hillsdalehouse.com/parts_request.html)

<b>HARDWARE LIST</b>	<b>PARTS LIST</b>			
A (4) Long Allen Bolts	G (1) Headboard	A	B	C
B (4) Short Allen Bolts	H (2) Leg Extensions			
C (8) Metal Washers	I (2) Adapter Plates	D	E	F
D (8) Hex Nuts				
E (2) Foot Glides				
F (1) Allen Wrench				

**FIGURE 1**

**FIGURE 2**

**FIGURE 3**

**FIGURE 4**

**FIGURE 5**

\* BED FRAME NOT INCLUDED AS SHOWN IN FIGURE 2 & 4


**STEP 1 FOR FULL AND QUEEN SIZE**  
 Insert both Leg Extensions (I) into bottom of Headboard(G). Next, attaching each Foot Glide (E) into bottom of each Leg Extension(H), by pressing in Firmly. The use of a rubber mallet may be necessary for fitting each foot glide. See FIGURE 1.

**STEP 2 FOR QUEEN SIZE ASSEMBLY ONLY**  
 Fasten Bed Frame (Bed Frame Not Included) to Leg Extensions using 2 Long Allen Bolts (A), 2 Metal Washers (C) and 2 Hex Nuts (D) per Post. Tighten All Bolts. See FIGURE 2. Discard Adapter Plates (I).

**STEP 3 FOR FULL SIZE ASSEMBLY ONLY**  
 Secure Adapter Plates (I) to Leg Extensions (H) as shown in Figure 3 using 2 Long Allen Bolts (A), 2 Metal Washers (C) and 2 Hex Nuts (D), per Post. Tighten All Bolts and Nuts. Make Sure Adapter Plates Face Inwards. See FIGURE 5.

**STEP 4 FOR FULL SIZE ASSEMBLY ONLY**  
 Fasten Bed Frame (Bed Frame Not Included) to Adapter Plates (I) using 2 Short Allen Bolts (B), 2 Metal Washers (C), and 2 Hex Nuts (D) per Adapter Plate (I). Tighten All Bolts and Nuts. See FIGURE 4.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.

	BRASSOM FURNITURE	
	CUST	HSD
ITEM NO.	5003DUO	SIZE
NAME	MADDIE	
DATE	2005/01/19	L