



**MADISON BED SET**  
 Model #1010-460 Full Size  
 Model #1010-500 Queen Size  
 Model #1010-100 Post Kit

Date: 03-30-06

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required. - Customer Service Phone Number: 502-562-0000

**PARTS LIST**

- A (2) Duo Panels
- B (2) Short Wood Posts
- C (2) Long Wood Posts

**HARDWARE LIST**

- D (12) Short Allen Bolts
- E (8) Long Allen Bolts
- F (8) Metal Washers
- H (8) Spring Washers
- I (8) Hex Nuts
- J (1) Allen Wrench





Figure 1

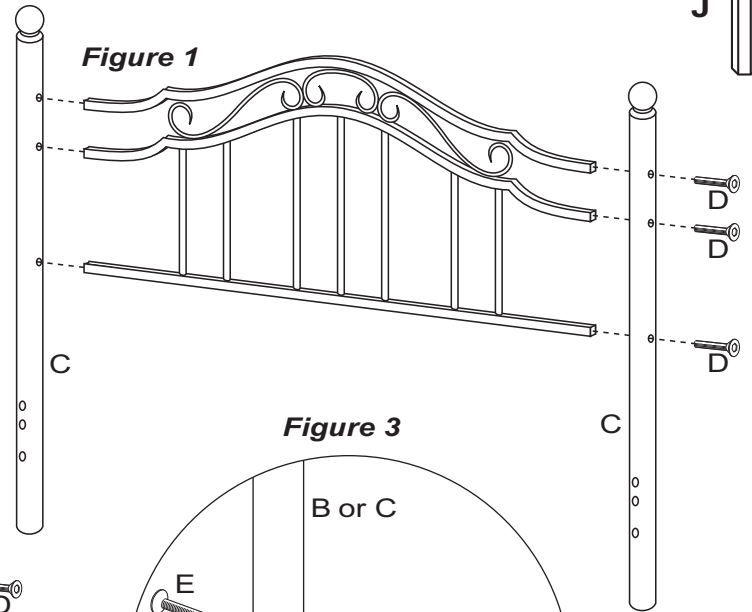


Figure 2


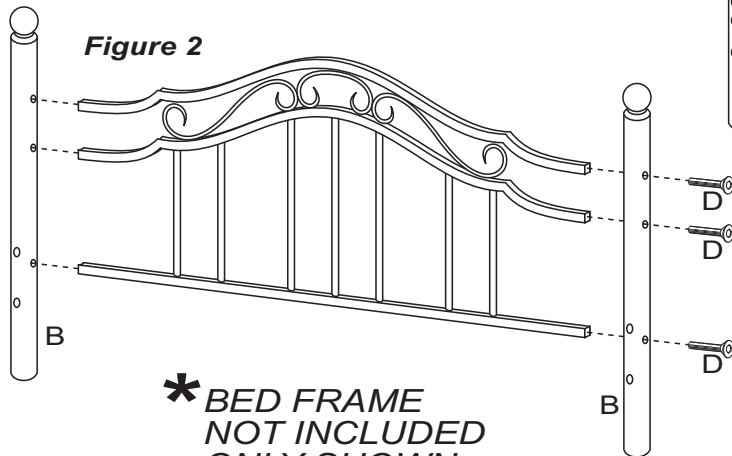


Figure 3

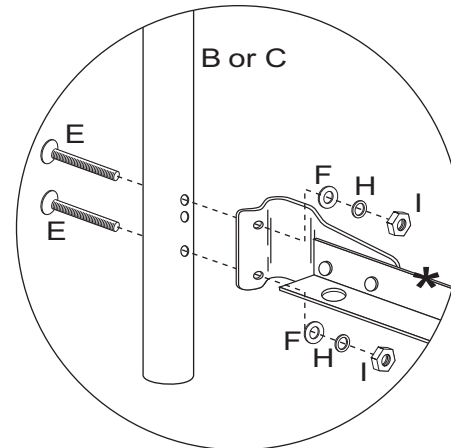

**\* BED FRAME NOT INCLUDED ONLY SHOWN ON FIGURE 3.**

**STEP 1 \*Assembling Duo Panels \***

Begin assembly by first attaching each Duo Panel (A) to both Short & Long Wood Posts (B & C), using 3 Short Allen Bolts (D) per each post. Tighten all bolts only using Allen Wrench (J) provided. See Figures 1 & 2.

**STEP 2 \*Assembling Bed Frame to Headboard \***

Attach Bed Frame (\*Curved Frame Sold Separately) to each Long Wood Post (C), using 2 Long Allen Bolts (E) through posts, 2 Spring Washers (H) & 2 Hex Nuts (I) per each post. Do not fully tighten bolts. See Figure 3.

**STEP 3 \*Assembling Bed Frame to Footboard \***

Attach Bed Frame (\*Curved Frame Sold Separately) to each Short Wood Post (B), using 2 Long Allen Bolts (E) through posts, 2 Spring Washers (H) & 2 Hex Nuts (I) per each post. Do not fully tighten bolts. See Figure 3. Assembly is now complete.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.