

hayneedle



ITEM NAME: Island Bay Resin Wicker Blanca Hanging Egg Chair

SKU: HONG003-1,HONG003-2



For assistance with assembly, please contact customer service
1-888-880-4884

1/5


PRE-ASSEMBLY PREPARATION:



DO NOT LET CHILDREN PLAY IN OR AROUND THE UNIT DUE TO THE POSSIBLE RISK OF FINGER ENTRAPMENT.


- Please read through the instructions before beginning assembly.
- Two adults are recommended for assembly.
- Clear out the space for assembly and lay out all of the parts based on the Parts List, extra room will allow you to easily determine if all the pieces are present.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children until fully assembled.
- Ensure that all bolts are securely tightened before use. It is recommended that you re-check all nuts and bolts occasionally and re-tighten as necessary.
- Do not swing in the chair beyond the parameter of the base as doing so may result in the chair tipping over and could result in injury.
- Use on even surfaces only.
- Improper use of this product or failure to use as directed may result in injury.

PANEL AND FITTINGS IDENTIFICATION:

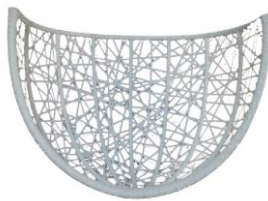

Bottom basket (A)

Qty:1

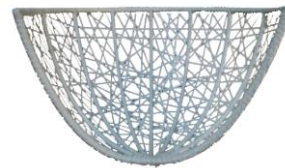

Top Basket (B)

Qty:1



Bottom Pole (C)

Qty:1



Upper Pole (D)

Qty:1



Left Base (E)

Qty:1



Right Base (F)


Qty:1

HARDWARE LIST:

 <p>Short Allen Bolt (G) Qty: 6</p>	 <p>Long Allen Bolt (H) Qty:2</p>	 <p>Cup Nut (I) Qty:6</p>	 <p>Cup Nut (U) Qty:2</p>
 <p>Long Bolt (J) Qty: 4</p>	 <p>Small Allen wrench (V) Qty: 1</p>	 <p>Small Washer (K) Qty: 8</p>	 <p>Nut (L) Qty:4</p>
 <p>Big Allen wrench (M) Qty: 1</p>	 <p>Big Wrench (N) Qty:1</p>	 <p>Small Wrench (O) Qty:1</p>	 <p>Bit Washer (T) Qty:12</p>
 <p>Chain (P) Qty:1</p>	 <p>Spring (Q) Qty:1</p>	 <p>Hanging Rod (R) Qty:1</p>	 <p>Connector (S) Qty:1</p>


STEP-BY-STEP ASSEMBLY:

- Step 1: Attach panel E to panel F using two bolts G, four bit washers T and two cup nuts I. Tighten with allen wrench M and big wrench N. (Note: bit Washer T should be placed at the head of bolt G)

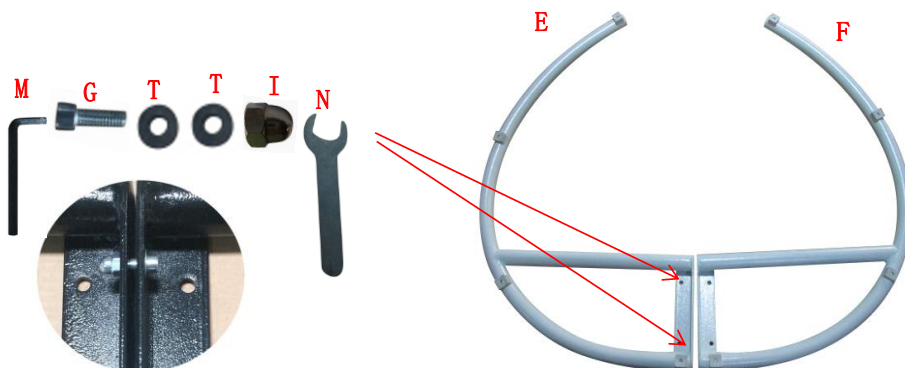


2

Step 2: Turn the assembled base right side up. Attach panel C to the base with four bolts G, eight bit washers T and four cup nuts I. Tighten with allen wrench M and big wrench N. (Note: Washer T should be placed at the head of bolt G, with cup nut I on the surface side)

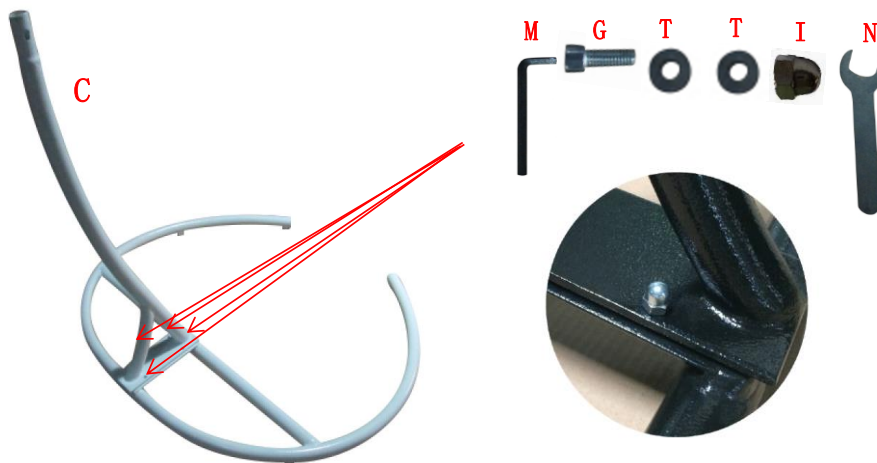


3

Step 3: Attach panel D onto the panel C using two bolt H and two cup nut U. Tighten with allen wrench M and big wrench N. (Note: there are two big hole and two small holes on each side of panel D, bolt H should goes in from big holes and out from small holes)

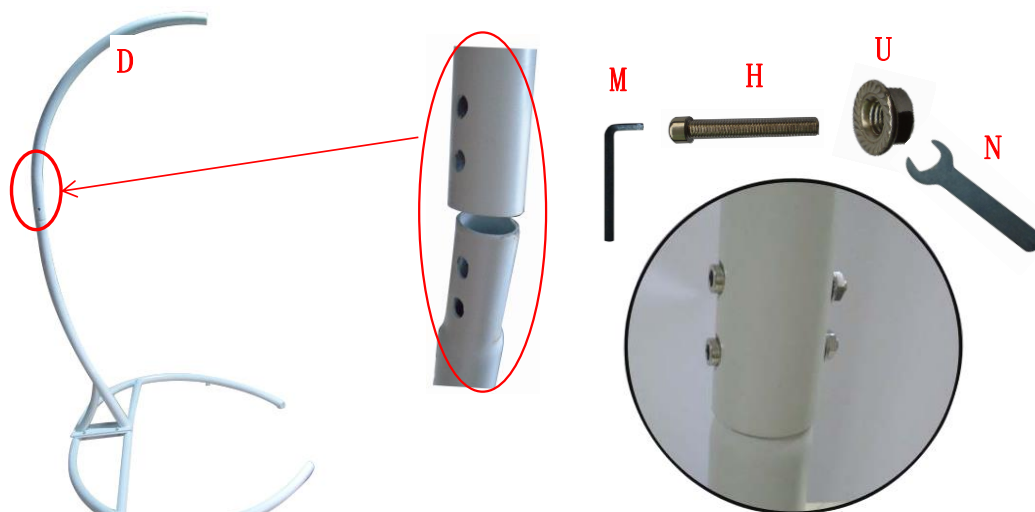

4

Step 4: Attach panel A and panel B with four bolts J, eight washers K and four nuts L. Tighten both bolts K and nuts L with allen wrench V and wrench O. (NOTE: For each hole, place one washer K onto bolt J. Then, put bolt J through baskets A and B. Place additional washer K and nut L onto the end of bolt J)

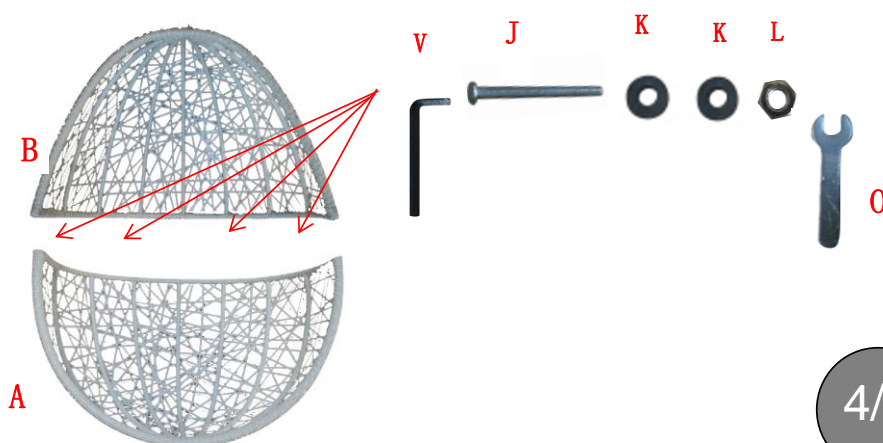

5

Step 5: Put hanging rod R through the top of panel D. Then, hang spring Q from rod R. Place a link of chain P through the end of spring Q. Attach panel B and chain P with connector S.

Place cushion onto the seat of basket.

