
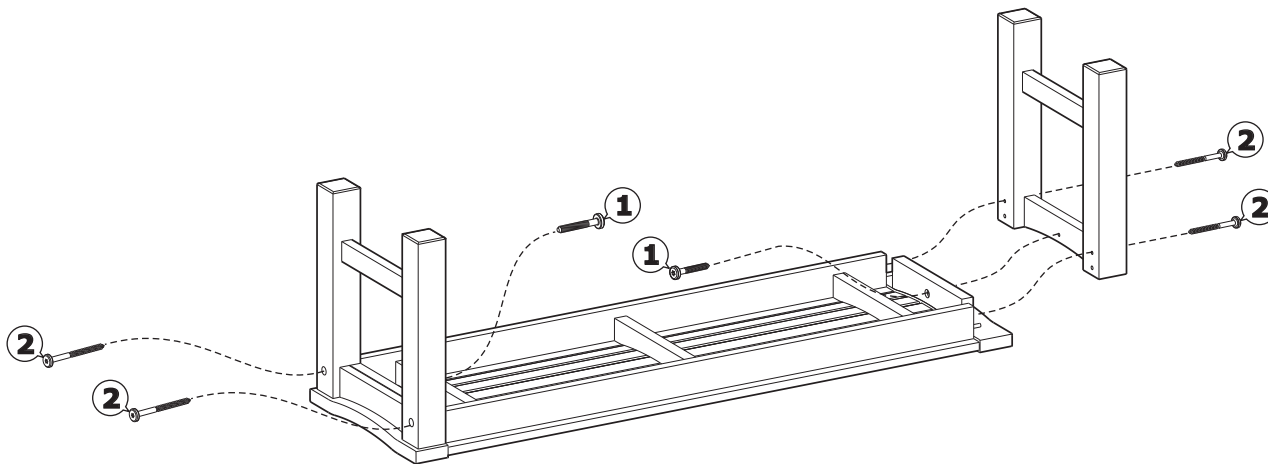



Assembly Instruction



1 
F-bolt M6x40x13-T30, GS x 2 PCS
SEM201415

2 
F-screw 6x90-T30, GS x 4 PCS
SEM201566

3 
Torx key T30, GS x 1 PCS
SEM201430

RINJANI BACKLESS BENCH 51", TEA
SEM102638