

**JEWELRY MIRROR IS SHIPPED "UNLOCKED". PLEASE USE CARE AND GENTLY USE LIGHT FORCE WHEN OPENING DOOR FOR FIRST TIME. HINGES WILL LOOSEN AS DOOR IS OPENED AND CLOSED. KEY IS INSIDE THE CABINET.**






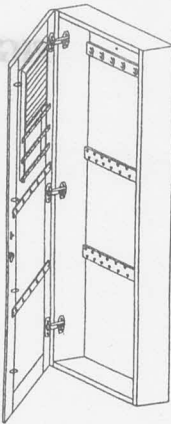
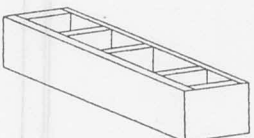
STYLE NO: VM5060 – MEDIUM OAK  
 VM5061 – BURGUNDY CHERRY  
 VM5062 – FROSTY WHITE  
 VM5063 - NATURAL

**SOUTHERN ENTERPRISES INC.**  
 RELAX...If you can follow a few easy, step-by-step directions in order .YOU CAN ASSEMBLE THIS ITEM.

**WALL-MOUNT JEWELRY MIRROR**

**PLEASE FIND HARDWARE IN RED POLYBAG BEFORE DISCARDING PACKING MATERIAL.**

HARDWARE LIST			
(1) WOOD SCREW	2PCS	(3) KEY	2PCS
			
(2) PLASTIC ANCHOR	2PCS		
			

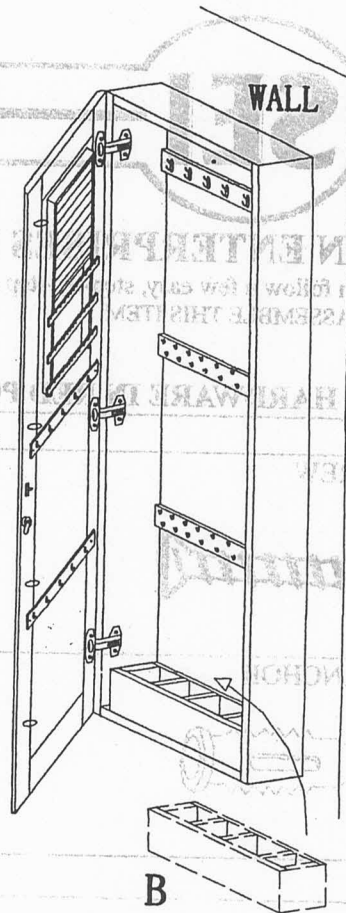
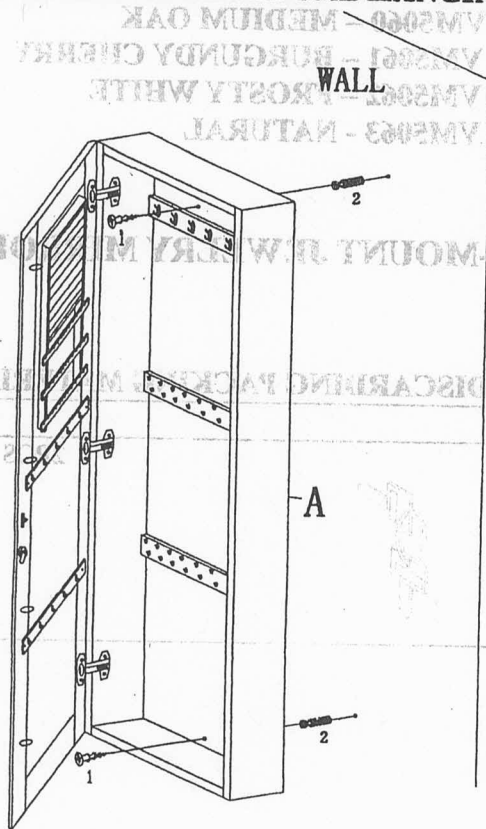
PART LIST			
(A) JEWELRY MIRROR	1PC	(B) WOOD BOX	1PC
			

**ASSEMBLY INSTRUCTION**

1. SELECT A SMOOTH, SOFT SURFACE TO PREVENT SCRATCHING FINISH.
2. YOU MAY NEED A PHILLIP SCREWDRIVER.
3. DRILL TWO HOLES ON WALL, THE DISTANCE BETWEEN TWO HOLES SHOULD MATCH THE

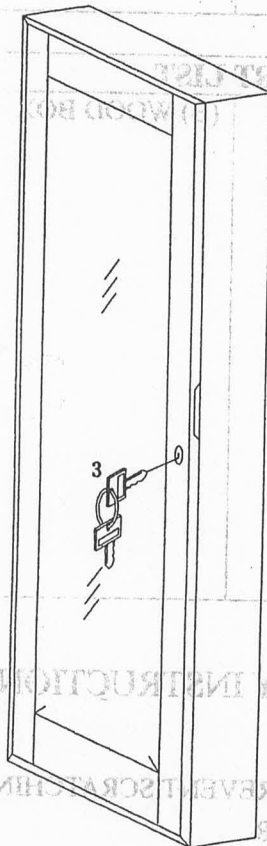
PREDRILLED HOLES ON BACK OF JEWELRY MIRROR (A). FIT PLASTIC ANCHORS (2) INTO THE HOLES ON WALL. USE SCREWDRIVER TO SCREW WOOD SCREWS (1) THROUGH PREDRILLED HOLES ON JEWELRY MIRROR (A) INTO PLASTIC ANCHORS (2). THEN PLACE THE WOOD BOX (B) INTO THE SPACE OF BOTTOM OF JEWELRY MIRROR (A). AS FIGURE 1 & 2 SHOWN.

**NOTE: PUSH THE SCREW FROM BACK TO FRONT OF THE UNIT TO CREATE MARKING ON THE FELT-LINE BEFORE HANGING THE UNIT.**



**FIGURE 1**

**FIGURE 2**



**READY**

**YOUR NEW WALL-MOUNT JEWELRY MIRROR IS FINISHED AND READY TO USE.**