



semco

Patio Rocking Chair

ASSEMBLY STEPS...

Materials needed: A lubricant suitable for plastic, such as liquid soap.

Step 1. Match the large recessed slot located on the **rocker arm** ① with the raised ridge located low on the side of the **rocker back** ②.

With the rocker back upright, insert the raised ridge into the recessed slot, as the arrows in the picture show. Then slide the rocker back, down into place. If it does not slide easily, lubricate the raised ridge to reduce friction. It is natural to have a gap of 1" or less where the rocker back joins the arms (circled in the picture at bottom left).

NOTE: It is not recommended that the rocker back be turned upside down to force the rocker arms into place.

Step 2. With the rocker back still upright, **repeat Step 1** to attach the other **rocker arm** ③.



Step 3. Lower the **rocker seat** ④, as shown in the picture below, until it sets firmly in place.

Enjoy your new patio chair!



semco OUTDOOR

5301 Old Baumgartner Road
St. Louis, MO 63129
(314) 487-4557
semcoplastics.com

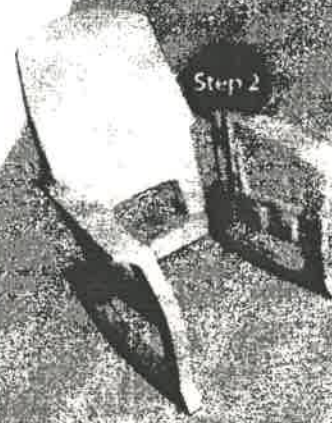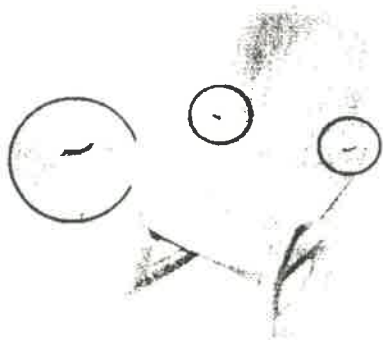

Step 3

Step 2

Step 1

①

②

④

③