


**Congratulations on the purchase of your Ware Backyard Hutch.  
The quality construction will provide your pet with a comfortable environment.  
Plus, assembly is quick and easy!**

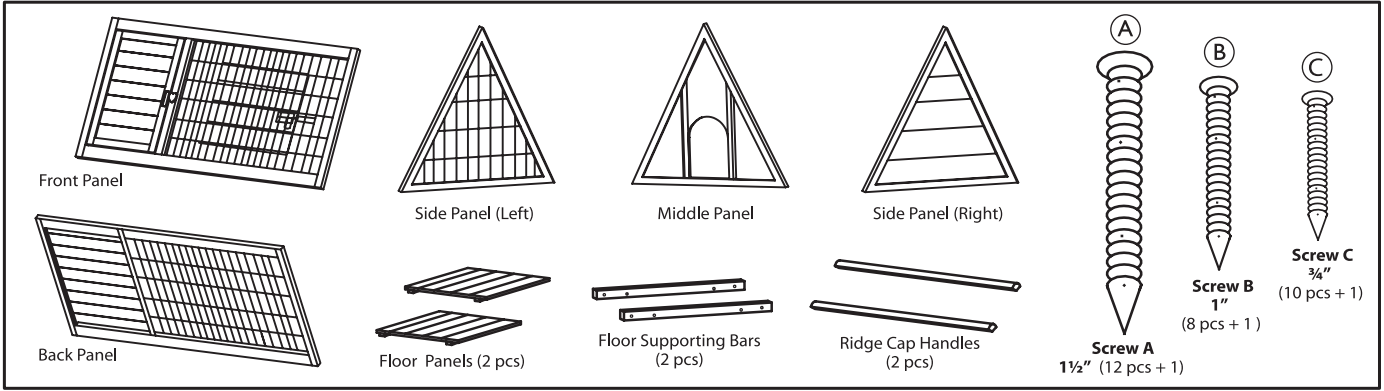

**1**

**Step 1-** Install Floor Supporting Bars on Right Side Panel and Middle Panel using **8- 3/4" (C) screws**

**2**

**Step 2-** Position Back Panel (no doorway) onto Left Side Panel, Middle Panel and Right Side Panel and secure with **6- 1 1/2" (A) screws**

**3**

**Step 3**  
Place both Floor Panels into place on top of the Floor Supporting Bars

**5**

**Step 5-** Secure 2 piece Ridge Caps to Hutch Assembly Using **8- 1" (B) screws** and **2- 3/4" (C) screws**.

**4**

**Step 4-** Assemble Front Panel onto Hutch Assembly and secure with **6- 1 1/2" (A) screws**.



**MADE IN CHINA**  
to the exact Design Specifications of  
**WARE MANUFACTURING, INC.**  
Phoenix, AZ, USA 85009  
VISIT US AT [www.waremfinc.com](http://www.waremfinc.com)

